



- J-585TM
- J-575 TM

J-500TM COLLECTION **OWNER'S MANUAL**2530-278B Rev B

Attention New Spa Owner!

Congratulations on the purchase of your new Jacuzzi® spa! The following is a list of automated functions performed by your spa. These functions are listed below in an attempt to suppress any operational concerns you may have during the first 24 hours of ownership! Also listed below are important maintenance recommendations you should observe on a regular basis to protect your new investment.

Automated Spa Operations

Your new spa is equipped with an automated "clean-up" cycle that clears all plumbing lines daily to promote maximum water sanitation. Each day at 12:00 PM (noon), each pump will activate and run for one minute. If either pump has just finished a 20 minute time out, it will not automatically activate for the clean-up cycle. Be aware, the factory programmed clean-up cycle cannot be canceled or altered!

Maintain Healthy Spa Water

Always maintain your spa's water chemistry within the following parameters:

	With CLEARRAY®	Without CLEARRAY®
рН	7.4-7.6	7.4-7.6
Free chlorine	no less than 1.0 ppm	3.0-4.0 ppm
Free bromine	no less than 2.0 ppm	2.0-4.0 ppm
Total Alkalinity	100-150 ppm	100-150 ppm
Calcium Hardness	150-250 ppm	150-250 ppm

IMPORTANT: CLEAR**RAY**® Water Purification System is factory installed. If the CLEAR**RAY**® system is altered or is not operating efficiently then follow the "without CLEAR**RAY**®" water chemistry parameters as defined by the Association of Pool and Spa Professionals. CLEAR**RAY**® requires an annual bulb replacement to properly sanitize your water.

TO DECREASE RISK OF INFECTION OR DISEASE! Always maintain your spa filter as outlined below to ensure healthy spa water. Refer to pages 50-53 (Sec. 13.0) for additional information.

Required Filter Maintenance

Your new spa is equipped with an advanced water filtration system that provides unsurpassed water quality! To ensure maximum water quality at all times, you should clean the skimming filter cartridge every 3 months, or as necessary. See pages 50-53 (Sec. 13.0) for detailed filter cartridge cleaning instructions.

Required Water Replacement

In the proper parameters. See pages 59-61 (Sec. 14.0) for additional information.



Table of Contents

1.0	Important Spa Owner Information	1
2.0	FCC Notice	1
2.1	Industry Canada (IC) Information	
3.0	Important Safety Instructions for all Spa Owners	2
3.1	Entrapment Risk	
3.2	Hyperthermia	
3.3	Important CSA safety instructions (Canada only)	8
4.0	Choosing a Location	
4.1	Outdoor Location	
4.2	Indoor Location	
4.3	Location for the Jacuzzi Remote Monitoring System	11
5.0	General Electrical Safety Instructions	12
6.0	Electrical Installation Instructions (240V Service)	
7.0	Power Requirements	
8.0	Spa Fill Up Procedure	17
9.0	Spa Features	
9.1	J-575 Spa Features	
9.2	J-575 Massage/Waterfall Selector Diagram	
9.3	J-575 Air Controls Diagram	
9.4	J-585 Spa Features	
9.5	J-585 Massage/Waterfall Selector Diagram	
9.6	J-585 Air Controls Diagram	27
10.0	Control Panel Main Menu	
10.1	ProTouch™ Glass Control Panel	
10.2	Register Your New Spa	
10.3	Home Menu	30
11.0	Operating Instructions	
11.1	ProTouch™ Glass Control Panel	
11.2	Activating the Jets Pumps	
11.3	Lights Menu	
11.4	Interior Lights:	
11.5	Exterior Lights	
11.6	Experience	
11.7 11.8	Music Menu	
11.8	Bluetooth® Pairing Instructions	
11.9	Audio Settings Menu	3 <i>1</i>

	_	_
Г	<u> </u>	\mathcal{I}
١,	J-50	\mathcal{I}

, , ,	00	
	CLEARRAY on Demand	
11.11	Adjusting Jet Flow	38
11.12	Adjusting PowerPro™ MX2 Jets	38
11.13	Adjusting RX Jets	38
	Waterfall Control	
11.15	Air Controls	38
11.16	Selecting the Desired Massage Action	39
	Optional BLUEWAVE® 2.0 Wireless Audio System	
12.0	Programming Instructions	40
12.1	Programming the Heating Mode	41
12.2	Programming the Primary Filter	
12.3	Programming the Secondary Filter	
12.4	Cleaup Cycle	
12.5	Blow-Out Cycle	
12.6	Water Care Programming	44
12.7	Locking the Spa	46
12.8	Programming the Time and Date	
12.9	Programming the Language	48
12.10	Wi-Fi Setup	
13.0	Spa Maintenance	50
13.1	Cleaning the Filter Cartridges	50
13.2	Draining and Refilling	
13.3	Cleaning the Spa Interior	55
13.4	Pillow Care	
13.5	Maintaining the Synthetic Cabinet	
13.6	Cleaning the Control Panel	56
13.7	Vinyl Cover Care and Maintenance	56
13.8	Winterizing	
13.9	Restarting Your Spa in Cold Weather	58
14.0	Water Quality Maintenance	
14.1	pH Control	
14.2	Sanitizing	
14.3	Other Additives	
14.4	CLEAR RAY ® (Ultraviolet) Water Purification System	60
14.5	CLEARRAY® Bulb Replacement and	
	Quartz Tube Maintenance	61
15.0	Error/Display Messages	
16.0	Troubleshooting Procedures	67
17.0	Typical Spa Wiring Diagrams	
17.1	Wiring diagram for North American 60 Hz Models Only	69

		(J-500
18.0	Circuit Board Wiring Diagrams	
18.1	Domestic 60Hz Wiring Diagram	70
18.2	Export 50Hz Wiring Diagram	71
18.3	Dip Switch Settings	72
18.4	Two Phase 50Hz Connection	73
18.5	Single Phase 50Hz Connection	74





1.0 Important Spa Owner Information

Your Jacuzzi[®] spa is constructed to the highest standards and is capable of providing many years of trouble-free use. However, because heat retentive materials are utilized to insulate the spa for efficient operation, an uncovered spa surface and wall fittings directly exposed to sunlight and high temperatures for an extended period are subject to permanent damage or discoloration. Damage caused by exposing the spa to this abuse is not covered under warranty. We recommend that you always keep the spa full of water when it is exposed to direct sunlight and that you keep the Jacuzzi insulating cover in place at all times when the spa is not in use. Read and carefully follow the requirements for your spa's support base found in the Section 4.0 titled, "Choosing a Location" (page 8).

Jacuzzi® spas constantly strives to offer the finest spas available, therefore, modifications and enhancements may be made which affect the specifications, illustrations and/or instructions contained herein.

2.0 FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Rearrange or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from the circuit connected;
- Consult the dealer or an experienced radio/TV technician for help. (Changes or modifications not expressly approved by the party responsible for FCC compliance could void the user's authority to operate this equipment.)

2.1 Industry Canada (IC) Information

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website: www.hc-sc.gc.ca.



3.0 Important Safety Instructions for all Spa Owners READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY!

This spa was manufactured to meet the standards and specifications outlined in the "Virginia Graeme Baker Pool and Spa Safety Act" (VGB Safety Act). When installing and using this spa, basic safety precautions should always be followed, including:

1. A DANGER: RISK OF SEVERE INJURY OR DROWNING!

- Extreme caution must be exercised to prevent unauthorized access by children.
- To avoid accidents, ensure that children do not use this spa unless supervised at all times. Adult supervision is a critical safety factor in preventing children from drowning.
- Use the straps and clip tie downs to secure the spa cover when not in use. This will help discourage unsupervised children from entering the spa. Keep the spa cover secure in high-wind conditions.
- There is no representation that the cover, clip tie-downs, or actual locks will prevent access to the spa.

2. A DANGER: RISK OF SEVERE INJURY OR DROWNING!

- Keep hair, loose articles of clothing or hanging jewelry away from suction fittings, rotating jets or other moving components to avoid entrapment that could lead to drowning or severe injury.
- Never use the spa unless all suction guards, filter, filter lid, or skimmer assembly are installed to prevent body and/or hair entrapment.
- Never operate or use the spa if the filter, filter lid, or skimmer assembly are broken or any part of the skimmer assembly is missing. Please contact your dealer or nearest service center for service.
- The suction fittings and suction covers in this spa are sized to match
 the specific water flow created by the pump(s). If it is necessary to
 replace the suction fittings, suction covers or pump(s), be sure that
 the flow rates are compatible and are in compliance with the VGB
 Safety Act.
- Never replace a suction fitting or suction cover with one rated less than the flow rate marked on the original suction fitting. Using improper suction fittings or suction covers can create a body or hair suction entrapment hazard that may lead to drowning or severe injury.

3. PANGER: RISK OF SEVERE INJURY FROM ELECTRIC SHOCK OR DEATH FROM ELECTROCUTION!

Install the spa at least 5 feet (1.5m), from all metal surfaces. As an alternative, a spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected (bonded) by a minimum No. 8 AWG (8.4 mm²) solid copper conductor attached to the wire connector on the grounding lug, inside the equipment compartment on the equipment box.



- A grounding wire connector is provided on this unit to connect a minimum No. 8 AWG (8.4 mm²) solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.5m) of the unit.
- Never permit any electrical appliance, such as a light, telephone, radio, television, etc. within 5 feet (1.5m) of a spa unless such appliances are built-in by the manufacturer.
- Never bring any electrical appliances into or near the spa.
- Never operate any electrical appliances from inside the spa or when you are wet.
- The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electrical Code/USA, ANSI/NFPA 70. The disconnecting means must be readily accessible and visible to the spa occupant but installed at least 5 feet (1.5m), from the spa.
- The electrical circuit supplied for the hot tub must include a suitable ground fault circuit interrupter (GFCI) as required by NEC Article 680-42.

4. WARNING: RISK OF SEVERE INJURY OR DEATH!

- Extreme caution must be exercised to prevent diving or jumping into the spa or slipping and falling, which could result in unconsciousness, drowning, or serious injury. Remember that wet surfaces can be very slippery.
- Never stand, walk or sit on the top railing of the spa.

5. VARNING: RISK OF HYPERTHERMIA (OVER-HEATING) CAUSING SEVERE INJURY, BURNS, WELTS OR DEATH!

- Water temperature in excess of 104°F (40°C) may be injurious to your health.
- Refer to Section 3.2 Hyperthermia for specific causes and symptoms of this condition.
- The water in the spa should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult.
- Lower water temperatures are recommended for young children (children are especially sensitive to hot water) and when spa use may exceed 10 minutes.
- The Consumer Products Safety Commission/USA has stated that the water temperature in a spa should not exceed 104°F (40°C).
- Always test the spa water temperature before entering the spa.
 The user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices may vary as much as +/- 5°F (2°C).



6. WARNING: RISK OF SEVERE INJURY OR DEATH!

- Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, if pregnant or possibly pregnant, consult your physician before using a spa.
- Pregnant or possibly pregnant women should limit spa water temperatures to 100°F (38°C).
- Persons suffering from obesity or a medical history of heart disease, low or high blood pressure, circulatory system problems, diabetes, infectious diseases or immune deficiency syndromes should consult a physician before using a spa.
- If you experience breathing difficulties in association with using or operating your spa, discontinue use and consult your physician.
- Persons using medication should consult a physician before using a spa since some medication may induce drowsiness, while other medication may affect heart rate, blood pressure, and circulation.
- Persons suffering from any condition requiring medical treatment, the elderly, or infants should consult with a physician before using a spa.
- The use of alcohol, drugs, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.

7. WARNING: RISK OF SEVERE INJURY OR DEATH!

- Prolonged immersion in a spa may be injurious to your health.
- Observe a reasonable time limit when using the spa. Exposures at higher temperatures can cause high body temperature (over-heating). Symptoms may include dizziness, nausea, fainting, drowsiness, and reduced awareness. These effects could possibly result in drowning or serious injury.
- Never use a spa immediately following strenuous exercise. Enter and exit the spa slowly. Wet surfaces can be slippery.

8. VARNING: TO DECREASE RISK OF INFECTION OR DISEASE!

- To reduce the risk of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments, maintain water chemistry within the parameters listed on the inside cover of this manual and consult with a licensed engineer regarding proper ventilation if installed indoors or in an enclosed area.
- People with infectious diseases should not use a spa to avoid water contamination, which could result in spreading infections to others.
- Always shower before and after using your spa. Maintain water chemistry in accordance with manufacturer's instructions. Failure to do so may result in contracting a waterborne illness (e.g. an infection, bacteria or virus).



9. WARNING: In addition to maintenance of filters and water chemistry, proper ventilation is recommended to reduce the risk of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments that could be present in the air or water. Consult a licensed architect or building contractor to determine your specific needs if installing your hot tub indoors.

10. CAUTION: TO DECREASE RISK OF PRODUCT DAMAGE.

- Maintain water chemistry in accordance with manufacturer's instructions.
- Proper chemical maintenance of spa water is necessary to maintain safe water and prevent possible damage to spa components.
- 11. WARNING: RISK OF SEVERE INJURY OR DEATH! The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 12. **NOTE:** This spa is not intended nor designed to be used in a commercial or public application. The spa buyer shall determine whether there are any code restrictions on the use or installation of this spa since local code requirements vary from one locality to another.

Hot Tub Safety Literature

To ensure you have a safe and enjoyable hot tub experience, learn all you can about hot tub safety and emergency procedures. Especially useful are the brochures listed below:

- Children Aren't Waterproof
- Pool and Spa Emergency Procedures For Infants and Children
- Layers of Protection
- The Sensible Way to Enjoy Your Spa or Hot Tub

The Association of Pool and Spa Professionals publishes these brochures. To acquire a brochure:

- Ask your hot tub dealer (they may have copies)
- Go to http://apsp.org
- Conduct your own search on the internet
- Write to the following address:
 The Association of Pool and Spa Professionals
 2111 Eisenhower Avenue
 Alexandria VA 22314
 703.838.0083




3.1 Entrapment Risk

The Consumer Products Safety Commission/USA has reported that users of pools and spas have become entrapped (stuck) to drain and/or suction fittings causing death, drowning, or serious injury (see diagram below). This spa was manufactured to meet the standards and specifications outlined in the "Virginia Graeme Baker Pool and Spa Safety Act" (VGB Safety Act). Entrapment risk can be minimized if proper precautions are taken.



DANGER: RISK OF PERSONAL INJURY OR DEATH! Never operate the spa if a suction fitting, suction cover, filter, filter lid or skimmer assembly are broken, damaged or missing.

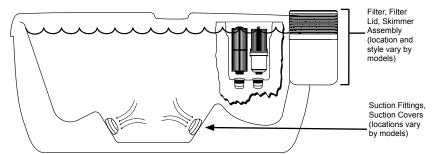

Note: Suction covers must be replaced every 5 years.

- 1. DANGER: RISK OF SEVERE INJURY OR DROWNING!
 Hair entrapment: May occur if hair is entangled, knotted or snagged in a drain suction or skimmer assembly. This has been reported in persons who when submerge themselves underwater, allowing hair to come close and/or within the reach of the suction fittings, suction covers or skimmer assembly.
- Keep hair away from suction fittings, suction covers, filter, filter lid or skimmer assembly.
- Children are at risk for hair entrapment if swimming under water.
- Never allow children to play or get near the suction fittings, suction covers, filter, filter lid or skimmer assembly.
- 2. DANGER: RISK OF SEVERE INJURY OR DROWNING! Limb entrapment: May occur when a limb becomes entrapped, inserted or sucked into a suction or outlet opening.
- Always keep suction fittings, suction covers, filter, filter lid or skimmer assembly in place when operating to avoid limb entrapment.
- Never allow children to play or get near the suction fittings, suction covers, filter, filter lid or skimmer assembly.



- 3. DANGER: RISK OF SEVERE INJURY OR DROWNING!
 Body entrapment: May occur when part of the torso becomes entrapped, inserted or sucked into a suction or outlet opening.
- Never allow children to play or get near the suction fittings, suction covers, filter, filter lid or skimmer assembly.
- 4. PANGER: RISK OF SEVERE INJURY OR DROWNING! Evisceration (disembowelment) entrapment: May occur when the buttocks becomes entrapped, inserted or sucked into a suction or outlet opening.
- Never sit on suction fittings, suction covers, filter, filter lid or skimmer assembly.
- Never allow children to play or get near the suction fittings, suction covers, filter, filter lid or skimmer assembly.
- 5. DANGER: RISK OF SEVERE INJURY OR DROWNING!

 Mechanical entrapment: May occur when jewelry, swimsuit, or
 hair accessories become entangled, knotted or snagged in a drain
 suction or skimmer assembly.
- Never allow your jewelry, swimsuit, or hair accessories to come close to the suction fittings, suction covers or skimmer assembly.
- Never allow children to play or get near the suction fittings, suction covers, filter, filter lid or skimmer assembly.

3.2 Hyperthermia

Prolonged immersion in hot water may induce hyperthermia (overheating). The use of alcohol or drugs can greatly increase the risk of fatal hyperthermia in spas. A description of the causes, symptoms, and effects of hyperthermia are as follows:

Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include drowsiness, lethargy (fatigue), and an increase in the internal temperature of the body (feeling of being too hot). The effects of hyperthermia include:

- Unawareness of impending hazard;
- Failure to perceive heat;
- Failure to recognize the need to exit spa;
- Physical inability to exit spa;
- · Fetal damage in pregnant women; and
- Unconsciousness and danger of drowning.

A Warning Sign is provided in your warranty packet. Please install at a location near your spa, where it is visible to users of the spa. For additional or replacement Warning Signs please contact your local Jacuzzi dealer and reference item number #6530-082.



3.3 Important CSA safety instructions (Canada only)

When using this electrical equipment, basic safety precautions should always be followed, including the following:

1. READ AND FOLLOW ALL INSTRUCTIONS.

- 2. A green colored terminal or a terminal marked G, Gr, Ground, Grounding or the \$\exists \text{symbol*} is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors that supply this equipment. *IEC Publication 417, Symbol 5019.
- At least two lugs marked "Bonding Lugs" are provided on the external surface or on the inside of the supply terminal box/ compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the spa to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG (10 mm²).
- 4. All field-installed metal components such as rails, ladders, drains or other similar hardware within 10 feet (3m) of the spa shall be bonded to the equipment grounding buss with copper conductors not smaller than No. 6 AWG (10 mm²).
- 5. SAVE THESE INSTRUCTIONS.

4.0 Choosing a Location

IMPORTANT: Because of the combined weight of the spa, water and users, it is extremely important that the base upon which the spa rests be smooth, flat, level and capable of uniformly supporting this weight, without shifting or settling, for the entire time the spa is in place. If the spa is placed on a surface, which does not meet these requirements, damage to the skirt and/or the spa shell may result. Damage caused by improper support is not covered under warranty. It is the responsibility of the spa owner to assure the integrity of the support at all times. We recommend a poured, reinforced concrete slab with a minimum thickness of 4 inches (10 cm). Wood decking is also acceptable provided it is constructed so that it meets the requirements outlined above.



WARNING: For spas that are to rest on balconies, roofs or other platforms not specifically tied into main structural support, consult a professional Structural Engineer with experience in this type of application.



The spa must be installed in such a manner as to provide drainage away from it. Placing the spa in a depression without provisions for proper drainage could allow rain, overflow and other casual water to flood the equipment and create a wet condition in which it would sit in. For spas which will be recessed into a floor or deck, install so as to permit access to the equipment, either from above or below, for servicing. Make certain that there are no obstructions, which would prevent removal of all side cabinet side panels and access to the jet components, especially on the side with the equipment bay.

 \triangle

CAUTION: If the spa is indoors or located in an enclosed area, proper ventilation should be discussed with an Engineer or authority competent enough to understand the necessary provisions needed to vent moist or heated air and air associated with chemical odors outdoors. When the spa is in use considerable amounts of moisture will escape potentially causing mold and mildew. This can cause health risk. Over time, this can damage certain surfaces, surroundings, and equipment.

4.1 Outdoor Location

In selecting the ideal outdoor location for your spa, we suggest that you take into consideration:

- The proximity to changing area and shelter (especially in colder weather).
- The pathway to and from your spa (this should be free of debris so that dirt and leaves are not easily tracked into the spa).
- The closeness to trees and shrubbery (remember that leaves and birds could create extra work in keeping the spa clean).
- A sheltered environment (less wind and weather exposure can result in lowered operation and maintenance costs).
- The overall enhancement of your environment. It is preferable not to place the spa under an unguttered roof overhang since run-off water will shorten the life expectancy of the spa cover.
- For spas that are to rest on balconies, roofs or other platforms not specifically tied into main structural support, consult a professional Structural Engineer with experience in this type of application.
- In the unlikely event that you should ever need to access or gain entry to any portion of the spa for servicing, it is highly recommended that you plan your outdoor installation to provide full access to the entire spa. Please take this into consideration when placing the spa in a deck or enclosed by a surrounding.
- Consider locating your spa away from any reflective surface or glass to prevent any damage to the synthetic skirt.
- Do not shim the spa. To ensure proper support the spa must sit flat on the intended foundation.



4.2 Indoor Location

For indoor installations many factors need to be considered before installing a spa indoors.



WARNING: In addition to maintenance of filters and water chemistry, proper ventilation is recommended to reduce the risk of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments that could be present in the air or water. Consult a licensed architect or building contractor to determine your specific needs if installing your hot tub indoors.

- Proper Foundation: Consult a Structural Engineer when considering a foundation that will adequately support the spathe entire time it is in place. Proper support is critical especially if the spa is to rest on a second story or higher. For spas that are to rest on balconies, roofs or other platforms not specifically tied into the main structural support, you should consult a professional Structural Engineer with experience in this type of application.
- Proper Drainage: It is extremely important to have in place measures to sufficiently handle excessive water spillage. Be sure the flooring in which the spa rests on has adequate drainage and can handle the entire contents of the spa. Be sure to make provisions for ceilings and other structures that may be below the spas installation. Areas around your spa can become wet or moist so all flooring and subsequent furniture, walls and adjacent structures should be able to withstand or resist water and moisture.
- Proper Ventilation: Proper ventilation should be discussed with an Engineer or authority competent enough to understand the necessary provisions needed to vent moist or heated air and air associated with chemical odors outdoors. When the spa is in use considerable amounts of moisture will escape, potentially causing mold and mildew over time, which can damage certain surfaces and/ or surroundings.
- Sufficient Access: In the unlikely event that you should ever need
 to access or gain entry to any portion of the spa for servicing, it is
 highly recommended that you plan your indoor installation to provide
 full access to the entire spa.
- Warranty: Damage caused by not following these guidelines or any improper installation not in accordance to local codes or authorities is not covered under the spas warranty. Please consult your local state or city building ordinances.
- **Do not shim the spa.** To ensure proper support the spa must sit flat on the intended foundation.



4.3 Location for the Jacuzzi Remote Monitoring System

IMPORTANT! Choose an installation site with the front control panel side pointing towards your home's Wi-Fi router.

CAUTION: You must make sure that the spa control panel side has a clear unobstructed line-of-site of the home Wi-Fi router. This action ensures maximum signal strength between the spa and your home's Wi-Fi router.

Verify your home router's Wi-Fi strength at the proposed spa location. Front control panel side of spa must point towards your home's Wi-Fi router in your home as illustrated, Figure 4.3a. Stand near the proposed front control panel side of the spa with your cell phone, then login to the internet using your home Wi-Fi router signal (not 3G or 4G) and verify results as follows:

If the home Wi-Fi router signal is strong (3-4 bars) and Internet access is stable, the proposed installation site is a good choice.

If the home router's Wi-Fi signal is weak and Internet access is slow or produces an error, the proposed installation site is not a good choice.

- It may be necessary to choose another spa installation site.
- Relocate your home Wi-Fi router closer to the spa.
- Install a "repeater" device in the room closest to the spa to boost the home's router Wi-Fi signal at the proposed spa installation site.

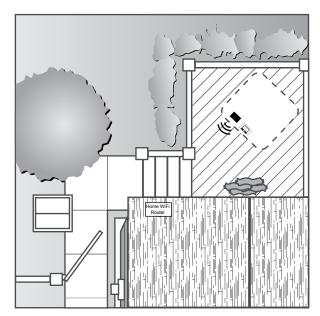


Figure 4.3a



5.0 General Electrical Safety Instructions

Your new Jacuzzi® spa is equipped with the ProTouch™ system. It contains the most advanced safety and selfprotective equipment in the industry. Nonetheless, this spa must be installed properly to ensure dependable usage. Please contact your local Jacuzzi dealer or local building department should you have any questions regarding your installation. Proper grounding is extremely important. Jacuzzi spas are equipped with a current collector system. A pressure wire connector is provided on the surface of the control box, located inside the equipment door (page 15) to permit connection of a bonding wire between this point and any ground metal equipment, metal water pipe or conduit within 5 feet (1.5m) of the spa, or copper clad grounding rod buried within 5 feet (1.5m) of the spa. Bonding wire must be at least No. 8 AWG (8.4 mm²) solid copper wire. This is a most important safety assurance feature. Before installing your spa, check with your local building department to ensure installation conforms to local building codes.

6.0 Electrical Installation Instructions (240V Service)

IMPORTANT NOTICE: The electrical wiring of this spa must meet the requirements of the National Electrical Code/USA (NEC) and any applicable state or local codes. The electrical circuit must be installed by a qualified electrician and approved by a local building/electrical inspection authority.

1. **DANGER:** TO DECREASE THE RISK OF SHOCK, PRODUCT DAMAGE OR ELECTRICAL FIRE.

This spa must be permanently connected (hard-wired) to the power supply. No plug-in connections or extension cords are to be used in conjunction with the operation of this spa. Supplying power to the spa, which is not in accordance with these instructions, will void both the independent testing agency listing and the manufacturer's warranty.

- The power supplied to this spa must be a dedicated circuit with no other appliances or lights sharing the power provided by the circuit.
- To determine the current, voltage and wire size required, refer to Section 7.0 "Power Requirements" (page 16) for your specific spa model.
- Wire size must be appropriate per NEC and/or local codes.
- We recommend type THHN wire.
- All wiring must be copper to ensure proper connections. Do not use aluminum wire.
- When using wire larger than #6 (10 mm²), add a junction box near the spa and reduce to short lengths of #6 (10 mm²) wire to connect to the spa.



- 4. The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electrical Code/USA, ANSI/NFPA 70. The disconnecting means must be readily accessible to the spa's occupant but installed at least 5 feet (1.5m) from spa water.
- 5. The electrical circuit supplied for the spa must include a suitable ground fault circuit interrupter (GFCI) as required by NEC Article 680-42/USA.
- 6. For Australia/ New Zealand, the spa should be supplied through a residual current device (RCD) with a rated tripping current not exceeding 30mA (IEC 60335-2-60).
- 7. To gain access to the spa's power terminal block, you will need to remove the corner and center cabinet panels.
- 8. Grab one of the corner panels, from the bottom, where it touches the bottom pan. Then gently pull the panel forward to unsnap it from the holding clip, Figure 6.0a. Place the corner panel in a safe location to prevent from damaging it. Repeat the steps to remove the other corner panel.
- 9. Now you need to remove the center panel. Grab the sides of the panel and gently pull the cabinet forward until all the clips have been release then pull up to remove, Figure 6.0b. Place the panel in a safe location to prevent from damaging it.
- 10. Select the power supply entrance you want to use, Figure 6.0c. Make sure to install a 3/4" electrical fitting and conduit through the large opening provided in the bottom of the control box so you can feed the cable through to the terminal block.
- 11. Then remove the 6 door screws for the access door on the control box (Figure 6.0d).
- Connect wires to the terminal block (Figures 6.0d-6.0e). ALL WIRES MUST BE SECURELY CONNECTED or equipment damage could result!
- 13. Install control access box door and reinstall the cabinet side panels.

Figure 6.0a Equipment Area

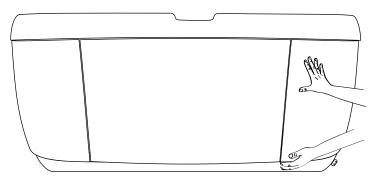




Figure 6.0b Equipment Area


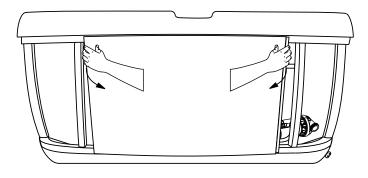


Figure 6.0c Equipment Area

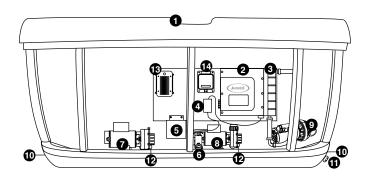


Note: Equipment location (such as pumps, CLEAR**RAY** system, stereo, drain, heater etc.) varies by model.

- ProTouch™ Glass Control Panel
- 2. ProTouch™ Control Box
- 3. Heater
- 4. Electronic Ballast (For CLEARRAY System)
- 5. CLEAR**RAY** Water Purification System
- 6. QuickDrain™

- 7. Jets Pump
- 8. Filter/Circulation Pump
- 9. Jets Pump
- 10. Power Supply Entrance(s)
- 11. Spa Drain Valve
- 12. Pump Drain Plugs(s)
- 13. BLUEWAVE 2.0 Wireless Stereo
- 14. Jacuzzi Remote Monitoring System Module




Figure 6.0d Terminal Block Connection

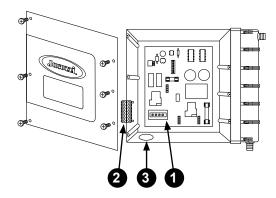

- 1. Main Terminal Block
- 2. Bonding Lug/Grounding Terminal
- 3. Power wires Entrance (Electrical fitting and conduit must be installed)

Figure 6.0e
Terminal Connections

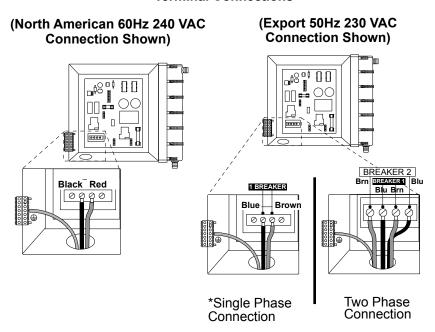

*White wire connections in controller board must be changed, page 74.



7.0 Power Requirements

Jacuzzi[®] spas are designed to provide optimum performance and flexibility of use when connected to their maximum electrical service. They are configured at the factory. The most common electrical connections are listed below. Reference page 72 for dip switch settings.

 All North American 60 Hz Models only: These models come set for 50A logic. If you prefer, your qualified technician can perform a logic modification that allows the spas to operate on a different electrical service.

North American Models (60 Hz)						
Voltage:	240 VAC	240 VAC	240 VAC			
Max. Current Draw:	32A	40A	48A			
Frequency:	60 Hz	60 Hz	60 Hz			
Number of Wires:	3	3	3			
Circuit Breaker (2-Pole):	40A*	50A**	60A***			

- In 40A configuration, the heater <u>will not operate</u> while either jets pump is running.
- ** In 50A configuration, the heater <u>will operate</u> when one jets pump is running, but <u>will not operate</u> while both jets pumps are running. *This is the factory setting.*
- *** In 60A configuration the heater <u>will operate</u> while both jets pumps are running.
- All Export 50 Hz Models: These models require a circuit board modification when using a two-phase connection.

Export Models (50 Hz)						
Voltage:	230 VAC	230 VAC	230 VAC			
Max. Current Draw:	15A	31.5A	15A/14A			
Wattage:	3,5 kW	7,2 kW	3,5/3,2 kW			
Frequency:	50 Hz	50 Hz	50 Hz			
Number of Wires:	3	3	5			
Service Input:	1x16A*	1x32A**	2x16A**			

- * In 1x16A configuration, the heater will not operate while either jets pump is running. Only one jets pump will operate at a time.
- ** In 1x32A or 2x16A configuration, the heater <u>will operate</u> while both jets pump is running. **2x16A** is the factory setting.



8.0 Spa Fill Up Procedure

For best results, read each step in its entirety before proceeding with this procedure.

1. Prepare The Spa For Filling

- Clear all debris from the spa. (Although the spa shell has been polished at the factory, you may want to treat it with a specially formulated spa cleaner.) Consult your authorized Jacuzzi dealer for additional information prior to filling spa.
- Remove both ProClarity™ and ProClear™ Plus skimmer, polishing filter lids and filters as illustrated in Section 13.1 (page 50).

2. Fill Spa

 Place the end of your garden hose into empty skimming filter bucket (filter bucket on your left) as you stand next to the spa. Fill spa half way, then place the garden hose into the opposite filter bucket (filter bucket on your right) while adding the remaining fill water.

CAUTION: TO DECREASE BUILD UP ON COMPONENTS AND MINIMIZE ACRYLIC DAMAGE.

Never fill with water from a water softener. If your water is extremely "hard," it is preferable to fill half-way with hard water and the rest of the way with softened water. Water that is too soft can be corrosive to metal components.

• VIN WARNING: TO DECREASE RISK OF INFECTION OR DISEASE.

Fill hot tub with clean tap water from garden hose, to reduce risk of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments. Fill until water covers all jets but does not touch the bottom of the lowest headrest (DO NOT OVERFILL!).

IMPORTANT: Always fill your spa through both filter buckets after draining. Failure to do so may cause air to be trapped in either pump, preventing the pump from circulating water. Remove the hose and replace both filter cartridges as illustrated in Section 13.1 (page 50).

3. Turn On Power

Turn on power to spa at the home's circuit breaker. The heater and filter/circulation pump will automatically activate. If the screen displays either a "Cool Warning" or "Freeze Protection" error, this is normal. Normally, at the initial fill, the water tends to be cold. Refer to page 65 for additional information.

4. Activate Jets Pumps

Turn on jet pumps when adding chemicals in step 5 (see Section 11.2, page 32 to activate jets).





5. Add Start-Up Chemicals

Add the spa water chemicals as recommended by your authorized Jacuzzi spa dealer. See Section titled "Water Quality Maintenance" (page 59) for general guidance.



WARNING: RISK OF POISONING OR DEATH.

Never leave chemicals opened and accessible to anyone. Use chemicals according to the vendor's instructions. Always store chemicals in a safe and/or locked location. Keep away from and out of reach of children.

6. Establish A Stable Sanitizer Reading

Establish a stable sanitizer reading of no less than 1.0 ppm free chlorine or 2.0 ppm bromine. To ensure healthy water conditions, always maintain a constant sanitizer reading within the levels recommended on the inside cover of this manual. If sanitizer levels cannot be stabilized, perform the decontamination procedure steps 1-7 on the following page.

Note: The "Decontamination Procedure" should also be used after the spa has been "Winterized" (Sec. 13.8, page 57) or has been sitting without power for an extended period.

7. Set Spa To Heat

To warm spa water to a comfortable temperature, follow these steps:



- The display on the control panel displays the actual temperature of the spa water. Tap ♠ or ▼ to increase or decrease the water temperature in 1 degree increments.
- The heater will turn off 1 degree above set temperature and turn on 1 degree below set temperature.

Note: The temperature range for the spa is 65 to 104°F (18.33 to 40°C). To activate the **Extended Temperature feature** that allows the spa to reach 106°F (41°C), see page 66.

Important Heater Details:

- The maximum temperature for which the spa can be set is 104°F (40°C) and the minimum is 65°F (18.33°C).
- For North American spas: With a 50 amp service, turn off one
 of the jet pumps to operate heater. With a 40 amp service, turn
 off both jet pumps to operate heater. With a 60 amp service, the
 heater will operate with both jet pumps on.
- Setting the thermostat at maximum will not accelerate the heating process. This will only result in a higher ultimate temperature.
- The heater operates until the water reaches 1 degree above the programmed "set temperature," then turns off. The heater will reactivate after the water cools to approximately 1 degree below the "set temperature."



- 8. Place Cover On Spa
- Keeping the insulating cover in place anytime the spa is not in use will reduce the time required for heating, thereby minimizing operating costs.
- The time required for initial heat-up will vary depending on the starting water temperature.



DANGER: RISK OF PERSONAL INJURY.

Check water temperature carefully before entering hot tub! Excessive water temperature can cause burns, welts and body temperature to rise, hyperthermia (over-heating).

Decontamination Procedure

Steps 1-7 below are only required when sanitizer levels are unstable after performing Spa Fill Up Procedures steps 1-6. Disregard steps 1-7 below if sanitizer levels remain stable after performing steps 1-6 above (refer to the inside cover of the manual).

Add 2.5 ounces of sodium dichlor for every 100 gallons of water.
 Refer to the table below for approximate water fill volume by model.



CAUTION: RISK OF PERSONAL INJURY OR SPA DAMAGE! Never add chlorine tablets (trichlor) or acid to your hot tub for any reason! These chemicals may damage components within your hot tub, burn or irritate your skin, create a rash, and void the manufacturer warranty for your spa.

Water Fill Volume by Model

	Average	Sodium
Model	Fill Volume*	Dichlor
J-575	445 Gal (1,685 L)	11.0 oz
J-585	440 Gal (1,666 L)	11.0 oz

*Use average fill volume for chemical maintenance

2. Leave spa cover open during this step to allow excessive chemical vapors to exit spa, protecting pillows and plastic knobs from chemical attack. If spa is indoors, open doors and windows for proper ventilation. Turn on all spa jet pumps for 1 hour, open all air controls, and place all massage selector knob(s) in their center "combo" position.
Note: You will need to activate the jet pumps every 20 minutes since

Note: You will need to activate the jet pumps every 20 minutes since these functions have an automatic 20-minute time-out that turns them off.





WARNING: RISK OF PERSONAL INJURY!

- To decrease the risk of injury, drowning or entrapment, never leave your hot tub unattended for any reason while the cover is open and accessible, especially to small children and animals!
- Precautions should be taken to minimize your exposure to chemical vapors (that could cause lung, brain, or skin damage).
- 3. Turn off power to the spa at the circuit breaker, then drain tub as outlined in Section 13.2 (page 54).
- Refill spa with clean tap water from garden hose until water covers all jets but does not touch the bottom of the lowest headrest with all headrests in their lowest position (DO NOT OVERFILL!)

CAUTION: TO DECREASE BUILD UP ON COMPONENTS AND MINIMIZE ACRYLIC DAMAGE.

Never fill with water from a water softener. If your water is extremely "hard," it is preferable to fill halfway with hard water and the rest of the way with softened water. Water that is too soft can be corrosive to metal components.

- Consult your authorized Jacuzzi dealer for chemical recommendations, then add chemicals to hot tub water to achieve a constant sanitizer reading within the levels recommended on the inside cover of this manual.
- 6. Turn on jet pumps when adding chemicals to ensure proper mixing and leave your hot tub cover open until the sanitizer level becomes stable to protect pillows and plastic knobs from chemical attack. Refer to the inside cover of the manual.



WARNING: RISK OF PERSONAL INJURY.

- To decrease the risk of injury, entrapment or drowning, never leave your hot tub unattended for any reason while the cover is open and accessible to small children and animals!
- To decrease the possibility of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments, maintain water chemistry within step 6 parameters. If you or other bathers experience such a condition, discontinue use and seek medical attention.



7. Establish a sanitizer reading no less than 1.0 ppm free chlorine or 2.0 ppm bromine, then allow the hot tub to set undisturbed for 8 hours. Retest water after 8 hours to determine if sanitizer levels are stable. If sanitizer levels are stable, your spa is ready for use. To ensure healthy water conditions, always maintain a constant sanitizer reading within the levels recommended on the inside cover of this manual. If sanitizer levels are not stable at this time, it will be necessary to repeat this procedure in its entirety until stable sanitizer readings are achieved.


IMPORTANT: If the CLEAR**RAY**® water purification system is removed from the hot tub or is not operating effectively follow the "without CLEAR**RAY**®" water chemistry parameters as defined by the Association of Pool and Spa Professionals.

8. After adequate sanitizer levels are achieved, close all spa air controls to maximize heat retention when spa is not in use.



9.0 Spa Features

9.1 J-575 Spa Features

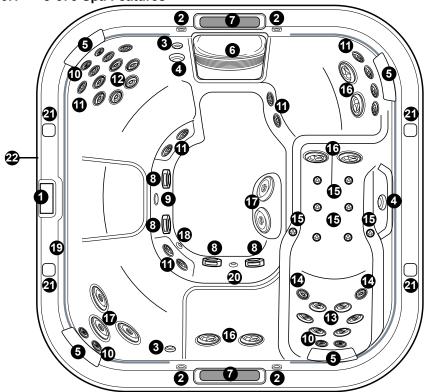


- 1. Control Panel
- Air Control Valves (4 ea.)
 Introduce Air to Specified Jet Groups
- 3. Waterfall Control Valve (2 ea.)
- Massage Selectors (2 ea.) Controls Specified Jet Groups)
- Pillows
- Filter/Skimmer Grill
- 7. Waterfalls (2 ea.)
- 8. Suction Covers (4 ea.)
- 9. Underwater Light
- 10. NX Jets (6 ea.)
- 11. FX Spinner Jets (14 ea.)
- 12. FX Jets (6 ea.)

- 13. RX Jets (6 ea.)
- 14. FX Directional Jets (2 ea.)
- 15. PX Jets (8 ea.)
- 16. FX2-S Jets (6 ea.)
- 17. MX2 Jets (5 ea.)
- 18. Gravity Drain/Heater Input/ CLEARRAY Return Fitting
- 19. Interior Perimeter Lighting
- 20. Waterfall Filtration Return
- 21. Optional Audio System Speakers (4 ea.)
- 22. Optional BLUEWAVE 2.0
 Wireless Stereo Audio System
 (located behind cabinet panel)



9.2 J-575 Massage/Waterfall Selector Diagram

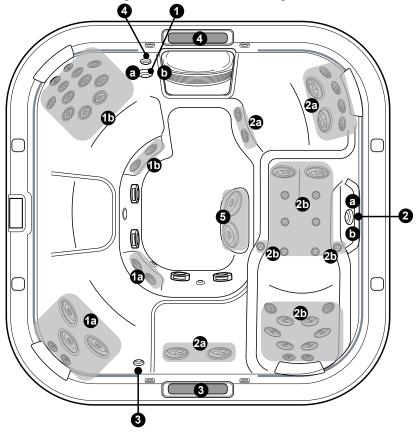

Massage Selectors (1-2)

- Massage selector 1 diverts jets pump 1 output between jets groups 1a-1b.
- Massage selector 2 diverts jets pump 2 output between jets groups 2a-2b

Waterfall Selectors (3-4)


- Waterfall selector (3) controls circulation pump output to waterfall (3).
- Waterfall selector (4) controls circulation pump output to waterfall (4).

Jets Without Massage Selector Controls (5)

• Jets (5) are always on when jets pump 1 is running.




J-575 Air Controls Diagram

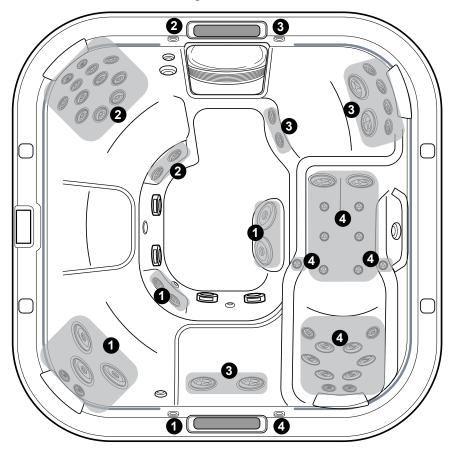

Air Controls Operation
Toggle air controls 1-4 to add air to designated jet groups.

9.4 J-585 Spa Features

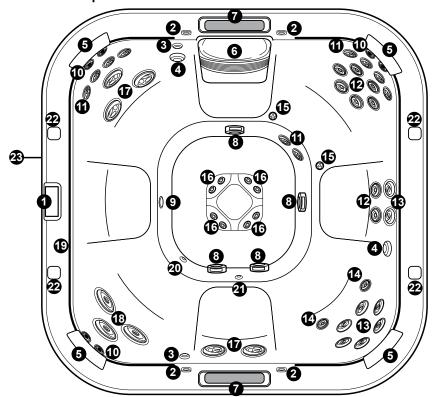


- 1. Control Panel
- Air Control Valves (4 ea)
 Introduce Air to Specified Jet Groups
- 3. Waterfall Control Valve
- Massage Selectors (2 ea.) Controls Specified Jet Groups)
- Pillows
- 6. Filter/Skimmer Grill
- 7. Waterfalls (2 ea.)
- 8. Suction Covers (4 ea.)
- 9. Underwater Light
- 10. NX Jets (6 ea.)
- 11. FX Spinner Jets (10 ea.)
- 12. FX Jets (8 ea.)
- 13. RX Jets (8 ea.)

- 14. FX Directional Jets (2 ea.)
- 15. PX Jets (2 ea.)
- 16. FX Small Jets (8 ea.)
- 17. FX2S Jets (5 ea.)
- 18. MX2 Jets (3 ea.)
- 19. Interior Perimeter Lighting
- Gravity Drain/Heater Input/ CLEARRAY Return Fitting
- 21. Waterfall Filtration Return
- 22. Optional Audio System Speakers (4 ea.)
- Optional BLUEWAVE 2.0
 Wireless Stereo Audio System
 (located behind cabinet panel)



9.5 J-585 Massage/Waterfall Selector Diagram

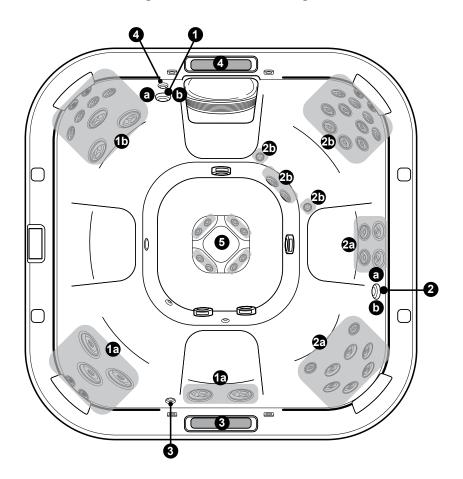

Massage Selectors (1-2)

- Massage selector 1 diverts jets pump 1 output between jet groups 1a-1b.
- Massage selector 2 diverts jets pump 2 output between jet groups 2a-2b.

Waterfall Selectors (3-4)


- Waterfall selector (3) controls circulation pump output to waterfall (3).
- Waterfall selector (4) controls circulation pump output to waterfall (4).

Jets Without Massage Selector Controls (5)

• Jets (5) are always on when jets pump 1 is running.



9.6 J-585 Air Controls Diagram

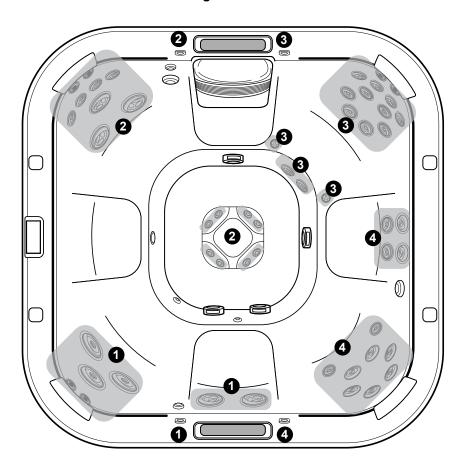

Air Controls Operation

• Toggle air controls 1-4 to add air to designated jet groups.



10.0 Control Panel Main Menu

10.1 ProTouch™ Glass Control Panel

Your Jacuzzi Spa is equipped with a state-of-the-art touch screen control panel, Figure 10.1a. The control panel complements the contemporary and sleek design of your spa. Access to all menus can be achieved by using the touch screen. Programming features can be easily programmed with our user-friendly design. With the ease of use, there will more time to enjoy the benefits of your spa.

Note: The Start up menu will time out after approximately 3 seconds and then change to the display in Section 10.2. Display for the control panel will vary depending on the model.



Figure 10.1a

10.2 Register Your New Spa

Registering your spa is important in order to validate your warranty, Figure 10.2a. In order to register you will need to have the spa serial number, Figure 10.2b, then you will need to register online in order to receive a passcode. The passcode must be entered on the control panel.




Figure 10.2a

If this option is skipped, you will be able to activate components, but, after 10 minutes, the components will turn off and the screen will revert back to the registration screen. This process will continue until the spa is registered and the passcode is entered.

Note: The spa will still protect itself if an error is detected.

J-500

 To register your spa you need to have your spa serial number. The best time to retrieve the serial number is when the spa is being connected. You must register your spa via the internet at www.Jacuzzi.com.



Follow these steps to register your spa.

1. Using your home computer or other device, connect to the internet.

- Figure 10.2b
- 2. Go to www.Jacuzzi.com website to register your spa.
- 3. Click Outdoor Hot Tubs
- 4. Click For Owners
- 5. Click Warranty and Manuals
- 6. Click Warranty Registration
- 7. Enter your serial number.
- 8. Once registered you will be given a passcode that will need to be entered into the control panel.

Keep a record of your serial number and passcode for any future reference. Write that information below.

Serial Number:	 	 	 	 	
Passcode:					

After registering your spa online, you can then enter the registration information into the control panel.

Note: If a number is entered wrong you can tap **™** to move backward.

- From the registration screen, Figure 10.2a, tap enter # to enter the spa serial number.
- Input the 9-digit serial number, Figure 10.2c.
- 3. Tap Set to enter the information and proceed to enter the passcode.
- 4. Now input the 9-digit passcode, Figure 10.2d, that was provided online when you registered your spa.
- 5. Tap Set to enter the information.



Figure 10.2c



Figure 10.2d



10.3 Home Menu

The Home Menu, Figure 10.3a, provides access to spa functions and programming. Operation is made easy by the interactive touch-screen control panel. If there is no activity for 5 minutes, the LCD display will time-out into a sleep mode. To reactivate the display, just swipe across the top from one corner to the other.

A. Home Menu Control Buttons

When a feature is on, the button will have a blue highlight around it.



Figure 10.3a



- **Temperature Control:** Allows you to adjust the set temperature of the spa:
 - Increase the temperature by tapping
 in 1° increments.
 - Decrease the temperature by tapping in 1° increments.

Note: The temperature range for the spa is 65 to 104°F (18.33 to 40°C). To activate the **Extended Temperature feature** that allows the spa to reach 106°F (41°C), see page 66.



- **Jet Button:** Tap to access the menu to operate the jets pump, page 32.
- **Light Button:** Tap to access the menu to operate the various lighting options, page 33.



Music Button: Tap to access the menu to operate the audio system and settings, page 35.

Note: If the spa does not have the stereo option, there will not be a button on the control panel.



= CLEARRAY Button: Tap to activate the CLEARRAY on demand feature, page 38.



Error Indicator Icon: Displays when there is error message that needs to be addressed. The icon will also appear under the Temperature reading as a reminder, page 64.




- **= Invert Button:** Tap to invert the display image.
- *
- **Settings Button:** Tap to access the programming and setting menus, page 40.



B. Status Bar

The status bar, Figure 10.3b, is located at the top of the Home Screen menu. When certain components, features or programs are on, their icons are represented within the Status Bar.

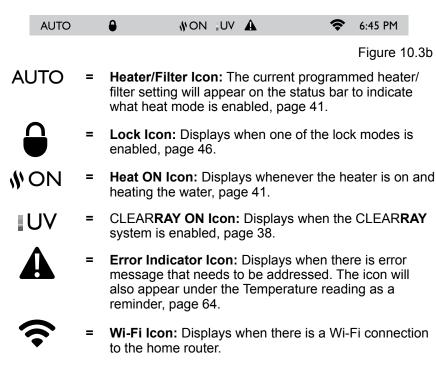

6:45 PM = **Time Indicator:** The time will always be shown when the Home Menu is displayed. The appearance will vary depending on whether the clock is set to a 12-Hour or 24-Hour configuration, page 47. The default setting

is 12-Hour.

Note: The time does NOT automatically adjust for daylight saving time. The time must be manually adjusted.



11.0 Operating Instructions

11.1 ProTouch™ Glass Control Panel

Your Jacuzzi spa is equipped with a ProTouch Glass control panel; massage selectors, and air control knobs located on the top rim of the spa (pages 22-27). These controls let you operate many of the special functions of your Jacuzzi spa.

11.2 **Activating the Jets Pumps**

From the Home Menu, (Figure 11.2a), tap (1) to enter the Jets Pump Submenu. The LCD screen will display the Jets Pump Submenu (Figure 11.2b).

Note: Once you enter the Jets Pump Submenu, all the pumps will activate. You can turn off the jets pump by tapping the jet button 1 or 2.





Figure 11.2a

Figure 11.2b



= Jets Pump 1 Button



= Jets Pump 2 Button



= Back Button: Tap to go back to the previous menu.

 


= Invert Button: Tap to invert the display image.



Setting Button: Tap to access the programming and setting menus, page 40.

1. Tap the Jets 1 button to turn the pump #1 on and



Note: When a jets pump is on, the button will have a blue highlight.



JETS ICON JETS ICON WHEN ON WHEN OFF

Auto Turn Off — Anytime a pump has been manually turned on, it will automatically turn off after approximately 20 minutes. If at this time you desire more jet operation you may simply turn the pump(s) back on.



11.3 Lights Menu

From the Home Menu, (Figure 11.3a), tap v to enter the Light submenus. The LCD screen will display the Light Submenu (Figure 11.3b). From this menu you can control the interior lighting, exterior lighting and experience effect. When you tap v to enter the submenus, the lights will turn on, if not on already.

Note: The lights automatically turn off after 2 hours. They can be reactivated if needed.





Figure 11.3a

Figure 11.3b



Interior Lights Selection: Tap > to enter the Interior Lights Menu.



 Exterior Lights Selection: Tap to change the intensity of the Exterior Lights.



= Experience Mode Selection: Tap → to enter the Experience Mode Menu.



= Back Button: Tap to go back to the previous menu.



Invert Button: Tap to invert the display image.



 Setting Button: Tap to access the programming and setting menus, page 40.

11.4 Interior Lights:

The interior lights consist of the waterfall lighting, above (perimeter lighting) and under (footwell lighting), Figure 11.4a. Each can be independently controlled or they can be controlled in unison. You can control 3 aspects of the interior lights.

 


Figure 11.4a

Tap 〈 or 〉 to scroll through the selections for "Waterfall," "Above," "Under" and "All." If you choose the "All" option, then the lights will work in unison and display the same features and colors.



To control the intensity of the interior lights follow the steps below.

The "Bright" feature controls the intensity of the interior 1. lights. Use \triangle or ∇ to select your intensity level. The levels range from 5 to 0, as follows: 5 = 100%, 4 = 80%. 3 = 60%. 2 = 40%. 1 = 20% and 0 = 0%.

bright

Figure 11.4b

Note: The default intensity level is 3.

2. This feature is available for the following selections: "Waterfall," "Above," "Under" and "All."

To control the speed of the interior lights follow the steps below.

The "Speed" feature controls the speed of the color blending, measured in seconds. Use \triangle or ∇ to select speed rotation. The levels range from 5 to 0, as Figure 11.4c follows: $5 = 5 \sec 3$, $4 = 10 \sec 3$, $3 = 15 \sec 3$,

speed

2 = 30 secs, 1 = 60 secs and 0 =single color.

Note: The default speed interval is 0.

This feature is available for the following selections: "Waterfall." "Above," "Under" and "All."

C. To select a solid color for the interior lights follow the steps below.

To make a selection tap the color block on the display. Colors available are White, Blue, Green, Yellow, Orange, Red, and Pink.



Figure 11.4d

Note: The default color will always be the last color used.

This feature is available for the following selections: "Waterfall," "Above," "Under" and "All."

Exterior Lights

The exterior corner lighting has 4 settings (Figure 11.5a). The lights display a solid White color only. By continually tapping you will scroll through the following:



1. OFF: Exterior lights are turned off.

Figure 11.5a 2. MID: Solid White color with a 50% intensity level.

ON: Solid White color with a 100% intensity level. 3.

AUTO: Solid White color with a 100% intensity level. Lights are on from 7:00 pm to 12:00 am.

Note: "AUTO" is the default setting.



11.6 Experience

The lighting experience can be user enhanced by activating one of the settings below. Just tap one of the words (Quiet, Fun, Glow or Joy) to start the experience, (Figure 11.6a). The default setting is "Glow."

 




Figure 11.6a

- Fun: All interior lights cycle through all colors with a 100% intensity level and speed of 5.
- 3. Glow: All interior lights are a solid White color with a 100% intensity level.
- 4. Joy: All interior lights cycle through all colors with an 80% intensity level and speed of 3.

11.7 Music Menu

Models equipped with the optional Audio System offer an enhanced spa experience. The BLUEWAVE 2.0 Wireless Audio System works with most Bluetooth wireless devices. An auxiliary device can be connected, via a 3.5 mm plug cable, located behind the front cabinet panel, if a Bluetooth device is not available. These models also include four high fidelity spa engineered speakers for unsurpassed sound quality and long-life, and an integrated powered subwoofer for a superb acoustical sound.

Note: If the spa does not have the stereo option, there will not be a button on the control panel.

To access the Music Menu, tap , Figure 11.7a. The display will change to Figure 11.7b. Once you enter the Music Menu, tap the power button to turn the stereo on. Your connected electronic device, Bluetooth or auxiliary, provides the audio entertainment.



WARNING: RISK OF ELECTRICAL SHOCK HAZARD EXISTS AND EQUIPMENT DAMAGE! Never install or remove electrical devices while hands are wet or while sitting partially immersed or fully immersed in spa!





Figure 11.7a

Figure 11.7b



= Power Button: Tap to turn the stereo on and off.

ВТ

= Bluetooth Settings: Tap to use your Bluetooth device with the stereo. This is the default setting.



AUX

= Auxiliary Settings: Tap to use your auxiliary device with the stereo.

= Audio Settings: Tap to access the audio submenu.

 
= Forward: Tap to advance forward through tracks.

 
= Rewind: Tap to move back through tracks.

= Pause/Play: Tap to pause and play tracks.

Volume Slider: Slide from side to side to increase and decrease the volume level.

= Artist Track: Will display the artist and track information. Artist if it is available. If the information is not available this part Track Name will be blank. If the information provided is too long, the maximum number of characters will be display follow by dots ("...").





= Setting Button: Tap to access the programming and setting menus, page 40.

If you experience a connection problem with your Bluetooth device, make sure that the Bluetooth antenna is secure and located at the highest point within the equipment bay.

Bluetooth® Pairing Instructions

To pair your Bluetooth® device to the BLUEWAVE™, follow these steps:

- Tap the music icon on the control panel screen then touch the power button located on the top right to turn on the stereo.
- From your Bluetooth device, make sure that the Bluetooth setting is 2. ON.
- Follow the pairing instructions for your Bluetooth device and connect 3. to "BLUEWAVE™" device that appears on your screen.
- If asked for a password, enter the password "0000" and then 4. connect.
- If the pairing process is successful, your Bluetooth device will show 5. "Connected" right next to "BLUEWAVE™".
- Once the connection is established, Bluetooth "BT" icon on the screen will be highlighted confirming the connection.

Note: The BT icon cannot be selected manually unless a Bluetooth connection is established with your device.



11.9 Audio Settings Menu

To enter the Audio Settings Menu, tap from the Music submenu, Figure 11.9a. The display will change to Figure 11.9b. The Audio Settings menu offers an enhanced audio experience by providing a custom or preset bass and treble settings.





Figure 11.9a

Figure 11.9b



 Level Adjustment Bars: Indicates the adjustment level by the number of bars filled.



Bass Adjustment: Slide from side to side to adjust the Bass range from -5 to 5. This feature can be used to create a custom sound.



Treble Adjustment: Slide from side to side to adjust the Treble range from -5 to 5. This feature can be used to create a custom sound.



Rock Preset: Tap **Rock** to activate the "Rock" music audio setting. "Rock" has a 1 Bass and 3 Treble preset setting. When not in use it will be grayed out; if it is in use the button will be highlighted, Figure 11.9b.



= Classical Preset: Tap Classical to activate the "Classical" music audio setting. "Classical" has a 1 Bass and 1 Treble preset setting. When not in use it will be grayed out; if it is in use the button will be highlighted, Figure 11.9b.



Pop Preset: Tap **Pop** to activate the "Pop" music audio setting. "Pop" has a -1 Bass and -2 Treble preset setting. When not in use it will be grayed out; if it is in use the button will be highlighted, Figure 11.9b.



Back Button: Tap to go back to the previous menu.



= Invert Button: Tap to invert the display image.



Setting Button: Tap to access the programming and setting menus, page 40.



11.10 CLEARRAY on Demand

The CLEARRAY on demand feature activates the water purification system for a period of 1-hour. Tap • to turn the system on. During this time the circulation pump and the CLEARRAY unit are on. The button will have a blue highlight when this feature is on.

Note: When the CLEAR**RAY** system is on due to a programmed or scheduled setting the feature cannot be turned off.



11.11 Adjusting Jet Flow

The water flow to <u>certain jets</u> in your spa can be increased or decreased by rotating the outside jet face.

Note: Always keep at least 6 adjustable jets open at all times.



11.12 Adjusting PowerPro™ MX2 Jets

Tilt PowerPro MX2 Jet nozzle to angle of choice as desired. Rotate nozzle <u>clockwise</u> to reduce flow volume from jet or rotate <u>counterclockwise</u> to increase flow volume.

Note: Always keep at least 6 adjustable jets open at all times.



11.13 Adjusting RX Jets

Rotate the outside jet face <u>clockwise</u> to decrease or shut off water flow. Turn <u>counterclockwise</u> to turn on or increase water flow.

Note: Always keep at least 6 adjustable jets open at all times.



11.14 Waterfall Control

Turn waterfall control valve (pages 22-27) from side to side to increase output, decrease output or turn off the waterfalls. **Note:** When the waterfall is in the OFF position, some water

may still flow through. This is considered normal.



11.15 Air Controls

Certain jet systems have their own air control. Each control introduces air into the water lines that supply that specific jet group (pages 22-27). Simply press any air control button, Jacuzzi logo side down, to open or press the opposite side to button to close. To minimize heat loss, all air controls should be closed when the spa is not in use.

Note: Certain jets may draw air even though they are closed. This is considered normal.

(J-50

11.16 Selecting the Desired Massage Action

Your Jacuzzi spa is equipped to allow you to customize the massage action you desire. Each model incorporates a massage selector that allows you to customize the massage and performance by diverting water between various jet systems. Simply turn the massage selector to divert water pressure to various jet groups.

Note: It is considered normal for sound levels within the valve to vary between positions due to the large amounts of water flowing through it. For optimum filtration benefits, leave the valve in the center position when the spa is covered.

11.17 Optional BLUEWAVE® 2.0 Wireless Audio System

Jacuzzi models equipped with the optional audio system offer enhanced hot tub enjoyment with an integrated state-of-the-art audio system. These models include an integrated Auxiliary or Bluetooth player receiver, high-quality spa engineered speakers for unsurpassed sound quality and long-life, and a powered subwoofer for an enhanced acoustical experience.



12.0 Programming Instructions

Your Jacuzzi spa is equipped with setting menus that allow you to program and activate different components of the spa. With our ProTouch™ Glass control panel, programming your spa has never been easier. In the sections that follow, we will guide you through the process of programming the spa to fit your personal comfort.





Figure 12.0a

Figure 12.0b

- ① Heat & Filter = **Heat and Filter:** Tap > to access the heating and filtration programming, page 41.
- **♦** Water Care = Water Care: Tap > to access the water care programming, page 44.
- Cock = Lock: Tap > to access the locking programming, page 46
- j Time & Date = Time and Date: Tap > to access the time and date programming, page 47.
- ⊕ Language = Language: Tap > access the language programming, page 48.
- Units = Units: Tap either or of for the temperature display. Default setting is .
- - = Back Button: Tap to go back to the previous menu.
 - = Invert Button: Tap to invert the display image.
 - = Slider Bar: Slide the bar up and down to view the selections available.



12.1 Programming the Heating Mode

Your Jacuzzi spa is equipped with 3 modes of heating, Figure 12.1a. An automatic mode called "Auto," where the spa's temperature is maintained at all times. An energy saving heating cycle called "Econo." A mode that will only activate the heater during the daytime called "Day" mode.

Note: The heater will activate when the temperature drops 2° from the set temperature.

Indicates that the feature is active. Indicates that the feature is not active.

A. Auto heating:

- When programmed to "Auto," the spa will maintain the water temperature to the set temperature. Heating will occur when necessary.
- 2. To select this mode, tap next to the "Auto" icon.

 


Figure 12.1a

B. Econo heating:

- This is an energy saving heating program that allows the spa to heat during non-peak hours. When programmed to "Econo," the spa will only be allowed to heat the water between 5:00 PM to 7:00 AM every day of the week. The hours cannot be adjusted.
- 2. To select this mode, tap next to the "Econo" icon.

C. Day heating:

- 1. When programmed to "Day," the spa will only be allowed to heat the water between 7:00 AM to 5:00 PM every day of the week. The hours cannot be adjusted.
- 2. To select this mode, tap next to the "Day" icon.

12.2 Programming the Primary Filter

To access the "Primary Filter" feature, you need to use the Slider Bar to scroll down to the "Heat & Filter" menu, Figure 12.2a and 12.2b. Once you scroll down, tap > to enter the "Primary Filter" programming, Figure 12.2c.







Figure 12.2b



During a primary filtration, the circulation pump, CLEAR**RAY** and ozone unit (if applicable) are activated. The factory default cycle starts at 12:00 AM and last for 8 hours. If you elect to keep this setting, then you can skip this section.



In extreme bitter cold weather we recommend you program the circulation pump to run 24 hours. Refer to the "Winterizing" section on page 57.

Any time the circulation pump runs outside of a program cycle, e.g. for heating, that run time will be deducted from the next primary filter cycle. For example, the primary filter cycle is set to 8 hours every 24 hours but the circulation pump comes on for 2 hours to heat the water after the cycle has finished. The next primary filter cycle will only be for 6 hours not 8 hours.

- A. To change the default cycle (the adjustments are made in 1-hour increments):
- Tap Start to program the start time for the cycle.
- Slide your finger up and down to roll the time scroll wheels to adjust the start time.



Figure 12.2c

- 3. Tap End to program the end time for the cycle.
- 4. Slide your finger up and down to roll the time scroll wheels to adjust the end time.
- 5. Tap Set to save and accept the changes.

<u>Summer Logic:</u> In warm weather, the water temperature in the spa may exceed the set temperature. This condition may occur due to heat transference from the filter/circulation pump and jets pumps. If the water temperature is higher than 95°F (35°C) and rises two degrees above the set temperature, a "Summer Logic" condition occurs that deactivates the filter/circulation pump and CLEARRAY®. This safety feature cannot be altered! The filter/circulation pump and CLEARRAY® will remain off until the water temperature cools to the set temperature (except between 9am-11am when the filter/circulation pump runs for it's mandatory 2 hour cycle.) To help prevent a "Summer Logic" condition, it may be necessary to reduce filter/circulation pump cycles run times in warm weather.



12.3 Programming the Secondary Filter

To enter the Secondary Filter program, tap > from the heat and filter menu, Figure 12.2b. The display will change to Figure 12.3a. During a secondary filtration, the Jets Pump 1 is activated. There are 3 cycles you can select from, Figure 12.3a. The factory default cycle is "Away Mode." If you elect to keep this setting, then you can skip this section.

 


Figure 12.3a

Indicates that the feature is active. Indicates that the feature is not active.

A. To change the Secondary Filter cycle:

1. Away Mode: Secondary Filtration is disabled. To activate this mode, tap next to the "Away" icon.

Note: This is the factory default setting.

- Infrequent Mode: Activates two cycles at 8:00 PM and 8:00AM
 every other day. Each cycle will last 10 minutes for a total of 20
 minutes every other day. To activate this mode, tap next to the
 "Infrequent" icon. Time and duration cannot be altered.
- Frequent Mode: Activates two cycles at 8:00 PM and 8:00AM <u>every day</u>. Each cycle will last 10 minutes for a total of 20 minutes every day. To activate this mode, tap next to the "Frequent" icon. Time and duration cannot be altered.

12.4 Cleaup Cycle

The cleanup cycle occurs once per day at 12:00 pm (noon) for two minutes. This is not user programmable. The Jets Pump 1 and the Circulation Pump will turn on for one minute and then shut off. Then Jets Pump 2 will turn on and run for 1 minute then shut off. Be aware, the factory programmed cleanup cycle cannot be canceled or altered!

12.5 Blow-Out Cycle

This cycle will purge the air from the plumbing lines normally caused by draining and filling the spa. The Jets Pump 1 and the Circulation Pump will turn on for 1 minute and then shut off. Then Jets Pump 2 will turn on and run for 1 minute then shut off. This cycle will **only** occur:

- At start up.
- After exiting a service lock.



12.6 **Water Care Programming**

Water care is crucial to maintaining a healthy and clean spa. The CLEARRAY water purification system leads the way by sanitizing the water using a UV light bulb. Your spa can be programmed to remind you when to check and replace certain components.

From the "Settings" menu, tap > next to "Water Care" to enter the programming options, Figures 12.6a and 12.6b.





Figure 12.6a

Figure 12.6b

A. Programming the CLEARRAY UV Bulb Timer

The CLEARRAY UV bulb has a life expectancy of 1-year. A timer activates when power is applied and begins a countdown starting at 365 days. Once the timer expires, an error message will appear of the display, the UV bulb must be replaced and the timer needs to be reset.

- When you enter the "Water Care" Menu, 1. Figure 12.6c, you will able to set the CLEARRAY UV bulb timer.
- 2. Slide your finger up and down to roll the days scroll wheel to adjust the number of days from 0 to 365. The adjustments are made in increments of 10 days.

Note: The CLEARRAY UV timer counts down by days not usage. The days are store in memory if the power is interrupted.

Tap Set to confirm and save your changes.

will reappear in 10 days.

4. When the timer expires, a message will appear on the control panel display. Figure 12.6d. The CLEARRAY UV bulb must be replaced (page 61) and



the timer must be reset. Tap "reset" and follow the instructions above to reset the timer. If you tap "snooze" the message will clear but the error icon **A** will display and the reminder screen

Water Care

0 days

②

CLEARRAY >

Set

Figure 12.6c

Figure 12.6d



Programming the ProClarity/ProClear Filter Timer

A programmable filter timer can be set to remind you when to clean or

replace the filters and skimmer bag.

- When you enter the "Water Care" 1. Menu, Figure 12.6c, tap \langle or \rangle until you reach the "ProClarity" option, Figure 12.6e.
- 2. Slide your finger up and down to roll the days scroll wheel to adjust the number of days from 0 to 180. The adjustments are made in increments of 10 days.

Note: The days are store in memory if the power is interrupted.

- Tap Set to confirm and save your changes.
- When the timer expires, a message will Figure 12.6f appear on the control panel display, Figure 12.6f. The filters must be cleaned or replaced. Follow the instructions above to reset the timer. If you tap "snooze" the message will clear but the error icon **A** will display and the reminder screen will reappear in 10 days. Refer to Section 13.1, page 50, for cleaning instructions.



Reminder

reset

Figure 12.6e



C. Programming the ProClarity Depth Filter Timer

A programmable filter timer can be set to remind you when to replace the ProClarity Depth Filter.

- 1. When you enter the "Water Care" Menu, Figure 12.6e, tap

 ✓ or

 ✓ until you reach the "ProClarity Depth" option, Figure 12.6q.
- Slide your finger up and down to roll the days scroll wheel to adjust the number of days from 0 to 90. The adjustments are made in increments of 10 days.

Note: The days are store in memory if the power is interrupted.

- Tap Set to confirm and save your changes.
- When the timer expires, a message will appear on the control panel display,



Water Care ⟨ProClarity Depth ⟩

0 days

③

Figure 12.6h

Figure 12.6h. Follow the previous instructions to reset the timer. The filter must be replaced. Refer to Section 13.1, page 50, for filter location. If you tap "snooze" the message will clear but the error icon A will display and the reminder screen will reappear in 10 days.



D. Programming the Water Change Timer

A programmable "Water Refresh" reminder can be set to remind you when to drain and refill the spa.

- While in the "Water Care" Menu, Figure 12.6g, tap \langle or \rangle until you reach the "Water Change" option, Figure 12.6i.
- 2. Slide your finger up and down to roll the days scroll wheel to adjust the number of days from 0 to 180. The adjustments are made in increments of 30 days.

Note: The days are store in memory if the power is interrupted.

- Tap Set to confirm and save your changes.
- 4. When the timer expires, a message will reset appear on the control panel display, Figure 12.6i. The water must be drained and replaced with fresh water. Follow the instructions above to reset the timer. If you tap "snooze" the message will clear but the error icon ▲ will display and the reminder screen will reappear in 10 days. Refer to Section 13.1,



Figure 12.6i

 


Figure 12.6j

12.7 Locking the Spa

page 50, for filter location.

From the "Settings" menu, tap > next to "Lock" to enter the programming options, Figures 12.7a and 12.7b. You can prevent users from changing certain features of the spa. When a lock feature is active, the lock icon will appear of the status bar. When you enter the "Lock" menu, if one of the three settings is active, it will be highlighted orange.

Note: A default passcode can be used in case the original passcode is lost or forgotten. The code "0772" will unlock the locked setting.



Figure 12.7a



Figure 12.7b



A. Temp Lock:

- Tap Temp to lock and unlock, Figure 12.7c.
- Use the scroll wheel 0000 to assign a 4-digit lock and unlock code by sliding your finger to change the numbers.
- The adjust temperature feature is disabled, but the spa will still perform all scheduled tasks.



Figure 12.7c

B. Spa Lock:

- 1. Tap Spa to lock and unlock, Figure 12.7c.
- 2. Use the scroll wheel 0000 to assign a 4-digit lock and unlock code by sliding your finger to change the numbers.
- All activation and adjustment features are disabled but the spa will still perform all scheduled tasks.

C. Service Lock:

- 1. Tap Service to lock and unlock, Figure 12.7c.
- 2. All spa functions are locked to allow for a temporary service mode for filter cleaning.

Note: This mode has a time out of 2 hours. The spa should not be left in this lock mode for an extended period. Especially in colder climate or when freezing conditions exist.

12.8 Programming the Time and Date

From the "Settings" menu, tap > next to "Time & Date" to enter the programming options, Figures 12.8a and 12.8b.



Figure 12.8a



Figure 12.8b

A. To set the time and date:


- 1. Tap Time to program the time, Figure 12.8c.
- 2. Slide your finger up and down to roll the time scroll wheels to adjust the time. The "am" and "pm" will adjust according as the time is changed.



Figure 12.8c



 - 3. Tap Date to program the date, Figure 12.8d.
- 4. Slide your finger up and down to roll the date scroll wheels to adjust the date. Each setting for month, day and year can be set independently.



6. Tap Set to save and accept the changes.



Figure 12.8d

12.9 Programming the Language

From the "Settings" menu, tap > next to "Language" to enter the language options, Figures 12.9a and 12.9b.





Figure 12.9a

Figure 12.9b

Indicates that the feature is active. Indicates that the feature is not active.

 There are 4 languages to select from: English, French, Deutsch, and Spanish. To view the selections, use the scroll wheel to move up and down. To select a language, tap next to the language you want to display, Figure 12.9c.

 




Figure 12.9c



12.10 Wi-Fi Setup

Connecting to your home Wi-Fi network. From the "Settings" menu, tap > next to "Wi-Fi" to enter the programming options, Figures 12.10a and 12.10b. Make sure you have downloaded the Wi-Fi App for this setup.





Figure 12.10a

Figure 12.10b

- You need to follow the instructions from the App in order to connect the Wi-Fi.
- While the system attempts to connect you will see the, "Spa Wi-Fi Setup in-progress," Figure 12.10b. When the connection is done the display will read, "Spa Wi-Fi Setup Connection Success," Figure 12.10c.



Figure 12.10c

If the Wi-Fi connection setting should need to be updated or connected to new router, follow the steps below.

- 1. From the "Settings" menu, tap > next to "Wi-Fi" to enter the menu.
- 2. Tap Reset? The display will change to "Spa Wi-Fi Setup In-progress" and the reset button will be highlighted in orange.
- 3. Tap Reset? again. This will clear the current data and allow the spa to connect to the need data.
- 4. Reconfigure and setup your spa by following the instructions from the app.



13.0 Spa Maintenance

Proper and regular maintenance of your spa will help it retain its beauty and performance. Your authorized Jacuzzi dealer can supply you with all the information, supplies, and accessory products you will need to accomplish this.

 


DANGER: RISK OF SEVERE INJURY OR DROWNING BY ENTRAPMENT!

- Keep hair, loose articles of clothing or hanging jewelry away from suction fittings, rotating jets or other moving components to avoid entrapment that could lead to drowning or severe injury.
- Never use the spa unless all suction guards, filter, filter lid, or skimmer assembly are installed to prevent body and/or hair entrapment.
- Never operate or use the spa if the filter, filter lid, or skimmer assembly are broken or any part of the skimmer assembly is missing. Please contact your dealer or nearest service center for service.
- The suction fittings and suction covers in this spa are sized to match the specific water flow created by the pump(s). If it is necessary to replace the suction fittings, suction covers or pump(s), be sure that the flow rates are compatible and are in compliance with the VGB Safety Act, page 2.
- Never replace a suction fitting or suction cover with one rated less than the flow rate marked on the original suction fitting.
 Using improper suction fittings or suction covers can create a body or hair suction entrapment hazard that may lead to drowning or severe injury.
- Owners must alert all spa users to the potential risk of Hair, Limb, Body, Evisceration (disembowelment), and Mechanical Entrapment, page 6.

13.1 Cleaning the Filter Cartridges

A reminder message appears on the control panel display after a specified number days to remind you to clean the skimmer filter and to check the polishing bag filter. This reminder must be reset at each filter cleaning interval. Refer to Section 12.6



(page 45) for additional information and programming details. Your new spa is equipped with an advanced 2-Stage filtration system. Fine debris are filtered by the circulation pump drawing water through the ProClarity™/ProClear™ skimmer and pleated filter cartridges 8 hours (unless programmed otherwise). Large debris are filtered when jets pump 1 is running when the spa is in use or during a programmed filter cycle. These pumps draw water from footwell suction fitting and through a secondary water polishing bag filter and additional filter.



A. Cleaning the filters and filter bag

To ensure optimum performance:


- The ProClarity™ filter cartridge (A) must be cleaned every month and replaced every 18 months.
- 2. The ProClarity Depth filter (B) must be replaced every 3 months.
- 3. The ProClarity filter canister (C) can be rinsed when the filters are cleaned.
- 4. The ProClear II skimming filter cartridge (D) must be cleaned every month and replaced every 18 months.
- 5. The ProClarity debris bag (E) should be checked and emptied monthly.

To accomplish this, refer to the following filter cleaning procedure.


Note: Do not attempt to wash the ProClarity depth filter (B) and the ProClear/ProClarity debris bag (E) or it will come apart!

B. Cleaning the Filters/Debris bag:


DANGER: TURN POWER TO SPA OFF! TO DECREASE RISK OF DEATH, DROWNING, OR ENTRAPMENT, NEVER OPERATE SPA WHEN FILTER IS NOT PROPERLY INSTALLED OR IF SKIMMER ASSEMBLY IS DAMAGED OR ALTERED!

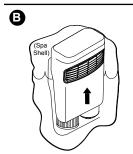

 Lift the cover upward to access filter cartridges.



Remove the ProClarity debris bag from clips and then clean out debris.

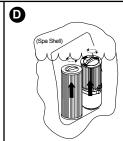

B

Rotate each filter cartridge handle counterclockwise to unthread from mating wall fitting.









Lift unthreaded filter cartridge from skimmer well.






Cartridge 1

 If used, remove the chemical feeder as instructed prior to rinsing the filter cartridge. Rinse debris from filter pleats using a garden hose and high-pressure nozzle. Start at the top and work downward towards handle. Repeat until all pleats are clean.






Remove the filter pins

 in order to separate
the ProClarity filter and
canister.







Once the filter pins are removed, rotate the filter cartridge handle counterclockwise to unthread from the filter canister. You can clean the filter and canister to but you must replace the ProClarity

Depth Filter 2 every 3

 0



0

 


Rinse debris from filter pleats using a garden hose and high-pressure nozzle. Start at the top and work downward towards handle. Repeat until all pleats are clean. Rinse out any debris from the canister.

Reassemble the ProClarity Filter.
Remember to replace the depth filter with a new one. Once the filter is assembled, secure it with the filter pins 1.

months.



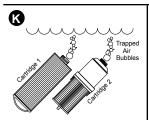






Submerge both filter cartridges in spa. Tilt threaded end upward to remove trapped air bubbles, then keep cartridges submerged to prevent air entrapment during installation.

Place each cartridge back into skimmer well, then rotated each cartridge handle clockwise to thread back into wall fitting. DO NOT OVERTIGHTEN! Install clean debris bag back onto the filter cover clips as shown (you can flip the filter skimmer and use the back side to extend usage).

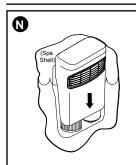

Reinstall the skimmer shield over the filters. Then turn power to spa back on.



13.2 **Draining and Refilling**

About every 3 months, you will want to replace the spa's water. The frequency depends on a number of variables including the amount of use, number of users, attention paid to water quality maintenance, etc. During this time, it is also recommended that you use Jacuzzi's Jet Line Cleaner to clean the internal plumbing lines from buildup and debris. Note: Jacuzzi chemicals are for use in the U.S. only.

CAUTION! READ THIS BEFORE DRAINING: To prevent damage to the spas components, turn off power to the spa at the circuit breaker before draining it. Do not turn the power back on until your spa has been refilled.

CAUTION: There are certain precautions to keep in mind when draining your spa. If it is extremely cold, and the spa is outdoors, freezing could occur in the lines or the equipment (see "WINTERIZING," page 57). On the other hand, if it is hot outdoors, do not leave the spa's surface exposed to direct sunlight.

Α. To drain your spa, perform the following steps (standard drain):

- 1. Turn off power to spa at breaker.
- 2. Locate the drain valve located on the front left corner on the black plastic pan. Hold the larger (rear) drain valve body to prevent it from turning, then loosen and remove the front cap to expose the underlying male hose threads, Figure 13.2a.







Figure 13.2a



 Figure 13.2b



 4. Gently rotate the larger (rear) valve body 1/3 turn counterclockwise to unlock the drain valve. Figure 13.2c.



Always fill your spa through both filter buckets.

6. After the spa drains, perform steps 2-5 in reverse order to close the drain prior to refilling spa.

After refilling, turn on power to the spa and follow the steps listed under "Spa Fill Up Procedures" (page 17).



Figure 13.2c

 


Figure 13.2d




B. To drain your spa, perform the following steps (QuickDrain):

- 1. Turn off power to hot tub at the breaker.
- 2. You must first remove the corner panels in order to remove the center panel, Figure 13.2e.



4. Now you need to remove the center panel. Grab the sides of the panel and gently pull the cabinet forward until all the clips have been release then pull up to remove, Figure 13.2f. Place the panel in a safe location to prevent from damaging it.

 



 


Figure 13.2f

 

 - Locate the QuickDrain valve, Figure 13.2g.
- 6. Unscrew drain valve cap, Figure 13.2h. Place the cap aside.
- Screw in the adapter with hose that was included in the equipment bay; attach it to the QuickDrain, Figure 13.2i. Make sure to direct the hose to an area where the water will drain properly.



 After the hot tub has drained close the slice valve by pushing it downward and sliding the handle to the side. Remove the adapter and reinstall the QuickDrain cap before refilling hot tub.

before refilling hot tub.

After refilling, turn on power to the spa and follow the steps listed under "Spa Fill Up Procedures" (page 17). Always fill your spa through both filter buckets.

Figure 13.2h

Figure 13.2a



Figure 13.2i

13.3 Cleaning the Spa Interior

To preserve the sheen of your spa's surface, it is crucial that you avoid using abrasive cleaners or cleaners which have adverse chemical effect on the surface. If you are not certain as to the suitability of a particular cleanser, consult your authorized Jacuzzi dealer. We recommend using Jacuzzi's Spa All Purpose Cleaner to clean the spa's interior surface. Use extreme care to assure that no soap residue is left on the surface. This could cause severe sudsing when the spa is refilled. Jacuzzi chemicals are for use in the U.S. only.



13.4 Pillow Care

Clean the headrests in your spa as needed by wiping them with a cloth with soapy water. It is not necessary to remove the headrests for cleaning. To remove headrests for long-term storage or replacement, grasp both ends of each headrest and gently pull inward towards the center of the spa. To reinstall, over mounting strip and press down until headrest mounting bracket emits a "click" sound.

13.5 Maintaining the Synthetic Cabinet

The synthetic cabinet requires little or no maintenance of any kind. To clean, simply wipe cabinet with mild detergent soap solution and a clean towel.



CAUTION: Never spray cabinet with a high pressure garden hose for any reason since this action may induce an electrical short in the spa's electrical equipment.

13.6 Cleaning the Control Panel

To clean, simply wipe control panel with a micro-fiber cloth that is used for cleaning polycarbonate lenses.

13.7 Vinyl Cover Care and Maintenance

Your Jacuzzi cover has a vinyl encasement. This vinyl encasement is attractive and durable. Monthly cleaning and conditioning, using Jacuzzi's Spa Cover Conditioner is strongly recommended to maintain and increase the longevity of your cover. Jacuzzi chemicals are for use in the U.S. only.

A. To Clean and Condition the Cover

- 1. Use a garden hose to loosen debris and dirt.
- 2. Using a large sponge or a soft bristle brush, use diluted or mild soap and scrub the vinyl top. Rinse clean and do not allow soap to dry on cover. Do not use soap on the underside of the cover.
- 3. Please check with your Jacuzzi Dealer about purchasing Jacuzzi's cover care and conditioning products. Condition using non-petroleum based conditioners to keep the vinyl supple and threads/stitching from drying out. Do not use solvents, abrasive cleaners or strong detergents. Do not use products that contain silicone or alcohol.

B. Additional Care and Maintenance Instructions:

- Debris can accumulate on the spa cover. Removal of snow or other debris will help to avoid breakage of the foam cores.
- 2. Be sure to lock the cover straps to secure the cover from unwanted or accidental entry.
- 3. Do not place heavy objects on the vinyl.
- 4. Do not walk, sit or stand on the cover.
- Do not drag or use the flaps/skirt or the cover lock straps to remove the cover.
- 6. Use only recommended cover lift systems.



- 7. Use only chemicals and cleaners recommended by Jacuzzi.
- 8. Remember to keep spa covered when not in use. Maintaining proper water levels assures efficient operation and efficient electrical usage.
- Do not expose your spa to the sun for extended periods of time as UV rays can damage the interior surface.
- Use caution when removing cover. Before removing cover, assure all locks have been released to avoid lock breakage and or cover strap damage.

13.8 Winterizing

Your Jacuzzi spa is designed to automatically protect itself against freezing when operating properly. During periods of severe freezing temperatures, you should check periodically to be certain that the electrical supply to the spa has not been interrupted. In extreme, bitter cold weather (less than 0°F) we recommend that the circulation pump is set for 24-Hour operation (Section 12.2 Programming The Primary Filter Cycle, page 41) and that auto-heating is selected (Section 12.1 Auto-Heating, page 41) to protect against damage to the spa.

If you do not intend to use your spa, or if there is a prolonged power outage during periods of severe freezing temperatures, it is important that all water be removed from the spa and equipment to protect against damage from freezing.

Expert winterization of your spa is highly recommended; contact your authorized Jacuzzi dealer. In emergency situations, taking the following steps can minimize damage:

CAUTION: TURN OFF POWER TO SPA.

- 1. Follow the directions on page 54 for draining the spa.
- 2. Turn the massage/diverter selector(s) into the middle combo position to allow the water in the plumbing lines to drain, page 39.
- 3. Turn the waterfall valve to the open position to allow the water in the plumbing lines to drain, page 38.
- 4. As the water level drops below the seats, use whatever means necessary to get the water out of the recessed seating areas and into the footwell, such as a wet/dry vacuum.
- 5. Open all the air controls and leave them open until you resume use of the spa, page 38.
- When the water level ceases to drop, use whatever means available to remove any remaining water from the footwell, such as a wet/dry vacuum.
- 7. Remove the equipment-side cabinet panels and locate the drain plugs in the front of each pump (Figure 6.0a, page 14). Remove these plugs to allow the water to drain out of the pumps and heater.

Note: Approximately one to two gallons will be released during this procedure. Use a wet/dry vacuum or other means to keep this from flooding the equipment compartment. Replace the drain plugs.



- Loosen hose clamp at bottom of heater (Figure 6.0a, page 14) and pull hose off of heater fitting (twist the hose back and forth while pulling downward). Tip hose down and allow it to drain and then reinstall hose and clamp.
- 9. Loosen the hose clamp on the circulation pump (if equipped) intake behind the control box (Figure 6.0a, page 14) and pull the hose off (twist hose back and forth while pulling outward). Tip hose down and allow it to drain and then reinstall hose and clamp.
- 10. Loosen hose clamp at bottom of CLEARRAY® system and pull hose off of CLEARRAY fitting (twist the hose back and forth while pulling downward). Tip hose down and allow to drain. Then reinstall hose and clamp. Remove the cover of the CLEARRAY system to access the UV bulb and quartz tube. Remove and store the UV bulb in a safe location. Remove and dry off the quartz tube then reinstall it. Depending on the length of time, consider replacing the UV bulb when you resume use of your hot tub.
- 11. Re-install cabinet side panels and cover spa so that no casual moisture can enter into it.

Consult your Jacuzzi dealer if you have any questions regarding winter use or winterizing.

13.9 Restarting Your Spa in Cold Weather

If you want to start up your spa after it has sat empty for a time in freezing temperatures, be aware that the water remaining in certain Sections of the piping may still be frozen. This situation will block water flow preventing the spa from operating properly and possibly damaging the equipment. We recommend you consult your dealer for guidance before attempting to restart your spa under these conditions.



14.0 Water Quality Maintenance

To decrease the risk of contracting a waterborne illness (e.g. an infection, bacteria or virus) and/or respiratory ailments, maintain water quality within specified limits. This will enhance your enjoyment and prolong the life of the hot tub's equipment. Doing so requires regular attention because the water chemistry involved is a balance of several factors. Procrastination in regard to water maintenance will result in poor and potentially unhealthful conditions for soaking and even damage to your hot tub investment. For specific guidance, on maintaining water quality, consult your authorized Jacuzzi dealer who can recommend the appropriate Jacuzzi chemical products. Jacuzzi chemicals are for use in the U.S. only.



WARNING: FAILURE TO MAINTAIN WATER QUALITY WILL:

- Increase risk of contracting a waterborne illness (e.g. an infection bacteria or virus) and/or respiratory ailments.
- Damage the equipment, components and spa shell, which are not covered under the hot tub's warranty.

CAUTION: Never store hot tub chemicals inside the hot tub's equipment bay. The equipment bay may reach elevated temperatures, this is where high voltage electronic devices are located. This area is not intended for storage of any kind.

14.1 pH Control

pH is a measure of relative acidity or alkalinity of water and is measured on a scale of 0 to 14. The midpoint of 7 is said to be neutral, above which is alkaline and below which is acidic. In spa water, it is very important to maintain a slightly alkaline condition of 7.4 to 7.6. Problems become proportionately severe the further outside of this range the water gets. A low pH will be corrosive to metals in the spa equipment. A high pH will cause minerals to deposit on the interior surface (scaling). In addition, the ability of the sanitation agents to keep the spa clean is severely affected as the pH moves beyond the ideal range. That is why almost all spa water test kits contain a measure for pH as well as sanitizer. Jacuzzi offers products that help you maintain the ideal range. These chemicals are for use in the U.S. only.

14.2 Sanitizing

To destroy bacteria and organic compounds in the spa water, a sanitizer must be used regularly. Chlorine and bromine are the two most popular sanitizers used to date. The "Proclear Mineral Spa Clarifier" designed especially for your hot tub is a beneficial product for water maintenance. Many other additives are available for your spa. Some are necessary to compensate for out-of-balance water; some aid in cosmetic water treatment and others simply alter the feel or smell of the water. Your authorized Jacuzzi dealer can advise you on the use of these additives.



When adding spa shock (chlorine or non-chlorine) or pH balancing chemicals activate the jet pump(s) and leave the spa cover open for a minimum of 20 minutes. By doing this you will allow excessive chemical vapors to exit the spa, protecting pillows and plastic knobs from chemical attack.



WARNING: RISK OF PERSONAL INJURY, DROWNING OR ENTRAPMENT!

Never leave your hot tub unattended for any reason while the cover is open and accessible, especially to small children and animals!

CAUTION: RISK OF PERSONAL INJURY OR SPA DAMAGE!

Never add chlorine tablets (trichlor) or acid to your hot tub for any reason! These chemicals may damage components within your hot tub, burn or irritate your skin, create a rash and void the manufacturer warranty for your spa.

14.3 Other Additives

Many other additives are available for your spa. Some are necessary to compensate for out-of-balance water, some aid in cosmetic water treatment and others simply alter the feel or smell of the water. With our chemical products your authorized Jacuzzi dealer can advise you on the use of these additives. Jacuzzi chemicals are for use in the U.S. only.

14.4 CLEARRAY® (Ultraviolet) Water Purification System

CLEAR**RAY** Water Purification System, Figure 14.4a, is exclusive technology utilizing natural ultraviolet technology to eliminate waterborne bacteria, viruses, and algae in portable spas. The ultraviolet light otherwise known as UV-C or germicidal light inactivates the microorganisms disrupting the DNA so that it cannot

Figure 14.4a

reproduce and is considered lifeless. CLEARRAY is plumbed in-line with your filtration system. After the water is drawn from the pump, filter, and heater it is then directed though the CLEARRAY system. Water passes through an ultraviolet light energy that treats and disinfects the water. The water is then pumped back into the spa giving you crystal clear water instantly. The system has a ballast that is the power supply for the purification system (Figure 14.4b); it has two LED indicator lights the green indicating incoming power flow

Figure 14.4b

and the red indicating the system is properly working. CLEAR**RAY** is standard for all models.


Note: The CLEAR**RAY** System only runs when the circulation pump is running and shuts off when either jets pump is manually activated during spa use. The system will remain off for 5 minutes after both jets pumps time out or are manually turned off, then resume operations if the circulation pump is programmed to run.



After a year the bulb must be replaced. If the CLEARRAY timer has been programmed correctly a message will appear on the LCD display when the time allotted has expired. In order to clear the message, a new CLEARRAY UV bulb needs to be installed and the timer must be reset, page 44.

14.5 CLEARRAY® Bulb Replacement and Quartz Tube Maintenance

Important: It is **MANDATORY** that the CLEARRAY UV bulb is replaced and the quartz tube be cleaned every 12 months to maintain optimum performance.

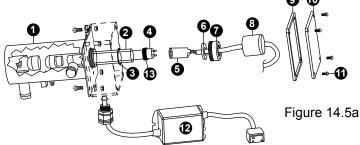



DANGER: TURN THE SPA BREAKER TO THE OFF POSITION!



WARNING: DRAIN THE SPA IF YOU ARE REPLACING OR CLEANING THE QUARTZ TUBE!



WARNING: ALLOW BULB TO COOL DOWN PRIOR TO REMOVING FROM QUARTZ TUBE.



DANGER: NEVER LOOK AT THE LIT BULB. THIS CAN CAUSE SEVERE EYE DAMAGE OR BLINDNESS.

UV bulb replacement and quartz tube maintenance:

Note: Location of CLEAR**RAY** System and connection may vary by model.

 Turn the breaker to the spa OFF. <u>DRAIN</u> <u>YOUR SPA</u>. Disconnect the CLEARRAY System from the controller, Figure 14.5b.

Note: If you are only replacing the UV bulb then the spa does not have to be drained. You will need to drain it if you are replacing or cleaning the quartz tube.




Figure 14.5b



DANGER: NEVER REMOVE COVER WITHOUT FIRST TURNING OFF AT POWER SOURCE AND DRAINING THE SPA.



2. Once the UV bulb has cooled off remove the CLEARRAY System enclosure cover (10) and gasket (9) by removing the four screws (11).

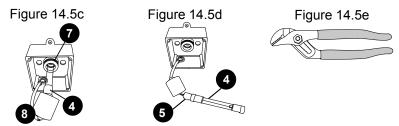

- 3. Remove the black bulb boot (8) by sliding it over the cable away from the quartz seal compression nut (7), Figure 14.5c.
- 4. Slowly remove the UV bulb (4) out of the quartz tube.
- 5. Remove bulb socket (5) from the UV bulb (4), Figure 14.5d.
- 6. Remove the quartz seal compression nut (7) by turning it **counterclockwise.** Figure 14.5c. Use a pair of channel-lock pliers if needed, Figure 14.5e. You will notice that there is a stainless steel compression washer (6) that slides over the quartz tube. Save the washer (6) for later use, Figure 14.5f. There is also a black seal ring (13), grasp the black seal ring; slowly and carefully remove the quartz tube.
- 7. Now you are ready to clean or replace the quartz tube (2). For the cleaning of the quartz tube (2), follow steps 8 and 9 then proceed to step 10. For replacing of the quartz tube (2), skip steps 8 and 9 and proceed to step 10.
- 8. <u>Cleaning quartz tube:</u> Clean the quartz tube by wiping until clear using a paper towel or a dry cotton cloth. If needed a household tub and shower lime removal product can be used.



WARNING: Do not use abrasive cleaners as they can scratch the guartz tube surface.

- 9. Rinse the quartz tube with clean water to completely remove any cleaning products that were used in step 4.
- 10. Replacing quartz tube: You will notice that the new quartz tube does not have a black cushion on the domed end as the old quartz tube does. This is normal as the cushion was provided with the original quartz tube to protect it from breakage during transportation. Install the black seal ring (13) over the opened end of the quartz tube. Place the new quartz tube (2) into the water chamber (1) with the domed end first making sure it is inserted and seated inside the quartz end holder. Only a small portion will be exposed when it is seated correctly.
- 11. Reinstall the compression washer (6) over the open end of the quartz tube (2). Push it against the quartz black seal ring (13).



- 12. Reinstall and hand tighten the quartz seal compression nut (7) by turning it **clockwise**.
- 13. Refill your spa.
- 14. **System Test 1:** Assure there is no water dripping from the seal compression nut (7). If water is visible, STOP and tighten the compression nut (7) using a pair of channel lock pliers to a maximum of 1/4 turn. If that does not fix the leak, then repeat quartz tube maintenance process from step 1 through step 13. Make sure there is no water leaking before proceeding to step 15.
- 15. <u>System Test 2:</u> Reconnect the CLEARRAY System to the controller. Turn breaker back ON and turn on the pump to circulate the water through the CLEARRAY System. Wait for 5 minutes and assure no water is dripping. If water is visible, STOP, fix the leak by repeating quartz tube maintenance process from step 1 through step 14. <u>Make sure there is no water visible. Turn the pump and breaker OFF, and disconnect the CLEARRAY System from the controller BEFORE proceeding to step 16.</u>
- 16. Reconnect the bulb socket (5) to the new UV bulb (4) make sure you use the latex glove provided when handling the UV bulb.

Note: Align pins on UV bulb (4) to the receptacle holes on the bulb socket (5) before inserting the pins completely into socket holes. Failure to do so will damage the UV bulb.



WARNING: DO NOT TOUCH THE NEW UV BULB WITH YOUR BARE HAND. Oil on your skin will cause hot spot on the UV bulb and shorten the life of your UV bulb. Use the provided latex glove to handle the UV bulb.

- 17. Slide the new UV bulb (4) back inside the quartz tube, Figure 14.5c.
- 18. Reinstall the black bulb boot (8) back over the quartz seal compression nut (7).
- 19. Reinstall the enclosure cover (10) with gasket (9) and secure with the screws.
- 20. Reconnect the CLEARRAY System to the controller and turn on the power to the spa.
- 21. Properly dispose of the old UV bulb.



WARNING: This CLEAR**RAY** System includes a UV bulb, which contains mercury. Dispose of the bulb in accordance with disposal laws. See www.lamprecycle.org.

22. Once power is activated you can check the ballast (12), Figure 14.5g, to see if the CLEARRAY System is functioning. A solid green light indicates that the CLEARRAY System is being provided power and should always be on. A solid red light indicates that UV bulb is activated.

 


Figure 14.5g



15.0 Error/Display Messages

There are a number of unique functions designed into your Jacuzzi spa to protect it from damage and/or to aid in troubleshooting. When an error occurs the spa will notify you by showing the screen below and an error code, Figure 15.0a. Following is a listing of all the possible messages along with their meanings. **Always insist on genuine Jacuzzi replacement parts**.

Note: If you tap

the display will change to Figure 15.0b. The error icon

will remain on the screen as a reminder. If the error is not taken care of or fixed, the error display will reappear in 2 hours, Figure 15.0a.





Figure 15.0a

Figure 15.0b

- Open Flow Switch: (Heater is deactivated. The filter/circulation may also be deactivated.) The flow switch is malfunctioning open, the circulation pump's filter cartridge is excessively dirty or an air lock condition has occurred at the circulation pump intake. Contact your authorized dealer or service organization.
- Closed Flow Switch: (Heater is deactivated. The filter/circulation may also be deactivated.) The flow switch is malfunctioning closed. Contact your authorized dealer or service organization.
- Shorted Hi-limit Temp Sensor: The hi-limit temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician.
- 4. <u>Open Hi-limit Temp Sensor:</u> The hi-limit temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician.
- 5. <u>Shorted Water Temp Sensor:</u> The temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician.
- 6. <u>Open Water Temp Sensor:</u> The temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician.
- Shorted Ambient Temp Sensor: The temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician. Monitors the controller temperature.



- 8. <u>Open Ambient Temp Sensor:</u> The temperature sensor is not functional. Heater is disabled. This must be repaired only by a qualified authorized service organization or service technician. Monitors the controller temperature.
- 9. <u>Closed Flow Switch on Start-up:</u> Flow switch is non-functional. Closed or shorted flow switch on system start-up (system disabled). Contact your authorized dealer or service organization.
- 10. <u>Frozen on Start-up:</u> Flow switch is non-functional. Shorted flow switch on system start-up (system disabled) and freeze condition detected. Contact your authorized dealer or service organization.
- 11. Cool Warning: Spa water is more than 20°F/-6.67°C cooler than the temperature set point, the circulation pump and heater will automatically activate to provide freeze protection. The spa will stay in this mode until the water temperature reaches 15°F/-9.44°C below the set

96° \$\infty\$ \$\infty\$ \$\infty\$

Figure 15.0c

temperature. No corrective action is necessary.

Note: The heater icon $\emptyset ON$ will be blinking and the error icon \triangle will be displayed under the temperature.

- 12. <u>Freeze protection:</u> A potential freeze condition has been detected. No action is required. Jets pump(s) operate until the spa is out of danger. No corrective action is necessary. If condition persists, contact your authorized dealer or service organization.
- 13. Overheat protection: DO NOT ENTER THE WATER! Water temperature is above acceptable limits. Heater is deactivated. Remove spa cover to speed cooling. If condition persists, contact your authorized dealer or service organization.

Note: The heater icon $\emptyset ON$ will be blinking and the error icon \triangle will be displayed under the temperature.



WARNING: RISK OF HYPERTHERMIA (OVER-HEAT-ING) CAUSING SEVERE INJURY, BURNS, OR WELTS.

14. <u>Watchdog Protection:</u> **DO NOT ENTER SPA!** Water temperature is above acceptable limits. Your spa is deactivated. Remove spa cover to speed cooling. If condition persists, contact your authorized dealer or service organization.

Note: The heater icon $\emptyset ON$ will be blinking and the error icon \triangle will be displayed under the temperature.



WARNING: RISK OF HYPERTHERMIA (OVER-HEAT-ING) CAUSING SEVERE INJURY, BURNS, OR WELTS.



15. <u>Watchdog Freeze Protection:</u> Spa water is below 40°F/4.4°C. Jet pumps operate until the spa is out of danger. Contact your authorized dealer or service organization.

Note: The heater icon ψ on will be blinking and the error icon \triangle will be displayed under the temperature.

16. <u>Controller Overheat Protection:</u> Controller temperature has exceeded acceptable limits. If condition persists, provide shade for equipment side of spa. Contact your authorized dealer or service organization.

Note: The heater icon won will be blinking and the error icon **A** will be displayed under the temperature.

- 17. <u>Panel Com Error:</u> The topside controller is having trouble communicating to your spa. Contact your authorized dealer or service organization.
- 18. <u>Stereo Com Error:</u> The stereo is having trouble communicating to your spa. Contact your authorized dealer or service organization.
- CLEARRAY Replacement Reminder
 This message will appear when the CLEARRAY bulb reminder time has expired (Figure 15.0d).
 The CLEARRAY bulb must be replaced.



Figure 15.0d

ProClarity/ProClear Filter Reminder
 This message will appear when the filter reminder time has expired (Figure 15.0e). Remove the ProClarity/Proclear filters and filter/debris bag for cleaning or replacement.



Figure 15.0e

ProClarity Depth Filter Reminder
 This message will appear when the filter reminder time has expired (Figure 15.0f). The ProClarity Depth filter must be replaced.



Figure 15.0f

22. Water Refresh Reminder

This message will appear when the "Water Refresh" timer has expired (Figure 15.0g). The water needs to be drained and refilled with fresh water.



23. Extended Temperature Activated:

The spa is set to go up to 104°F (40°C), but it can be set to reach 106°F (41°C). To access the extended temperature you need press and hold your finger over the temperature reading for about 5 seconds. The temperature reading will start to blink to indicate the system is ready. Tap to raise the temperature up to 106°F (41°C).

Note: The heater icon **NON** will be blinking to indicate that the feature is active.



16.0 Troubleshooting Procedures

In the unlikely event your spa is not working the way you believe it should, please first review all the installation and operating instructions in this manual and check the message on the panel display; second, if you are still not satisfied it is working properly, please follow the appropriate troubleshooting instructions.

PROBLEM

PROCEDURE

NONE OF THE COMPONENTS OPERATE (i.e. pump light)

Check the control panel lights.

- 1. If there are letters or symbols displayed on the screen, refer to the previous Section 15.0 to determine the meaning and action required.
- 2. If nothing appears on the screen:
 - A. Check the household circuit breaker.
 - B. Contact you dealer or authorized service center.

PUMP DOES NOT OPERATE

Activate the "JETS":

- If no sound is detected or if a "buzzing" sound is detected, turn off power to the spa and contact your dealer or service center.
- 2. If motor operates but no water flows to jets:
 - A. Pump may not be properly primed. See instructions below.
 - B. Contact dealer or authorized service center.

Pump Priming Instructions:

- 1. Turn off power to the spa.
- 2. Remove the handle from the massage selector supplied by the pump you are priming.
- 3. Loosen the massage selector's cap slightly (counterclockwise), listening for the air to seep out.
- 4. Tighten the cap finger-tight, replace the handle and turn the hot tub's power back on.

Note: This method must be used for the jet's pumps because these pumps are not connected to the main filter system in any way.

CAUTION: If freezing conditions exist and pump is not operational, take measures to protect the system from freeze damage. See Section 13.8 titled "Winterizing" (page 57).



POOR JET ACTION

- 1. Make certain the jets pump is turned on.
- 2. Check position of massage selectors.
- 3. Open air control for selected jet system.
- 4. Check for adequate water level.
- 5. Check for dirty filter (page 50).

WATER IS TOO HOT

- Reduce thermostat setting.
- 2. Switch hot tub to "Econo" mode to turn heater on only during pre-programmed time (page 41).
- 3. Make sure the pumps are turned off and not constantly running.

NO HEAT

- 1. Check thermostat setting.
- 2. Keep the cover in place while heating.
- If heater indicator is displayed, but no temperature increase is experienced after a reasonable period of time, contact your dealer or authorized service center.

FILTER/CIRCULATION PUMP OFF

- Verify filter/circulation pump is programmed to run 8 hours a day (page 41).
- 2. Make sure there are no errors preventing the pump from turning on.
- Hot tub water is warmer than 95°F (34°C) and two degrees warmer than the set temperature. The "Summer Logic" safety feature has activated. See note on page 42 for details.


Jacuzzi builds the best spas in the industry. Nonetheless, we are always striving to improve the quality and features of our products. Your input as a Jacuzzi spa owner is a cherished part of this process. If you have any comments or suggestions, or if you wish to be informed on any new products for your spa, please write to us.


CONGRATULATIONS on your good taste and welcome to the happiest and most relaxed family in the world!



17.0 Typical Spa Wiring Diagrams

17.1 Wiring diagram for North American 60 Hz Models Only

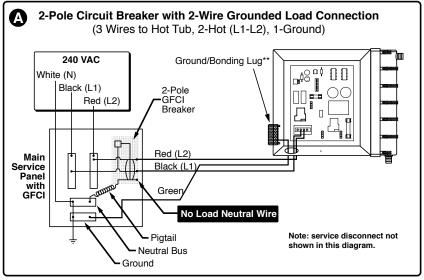


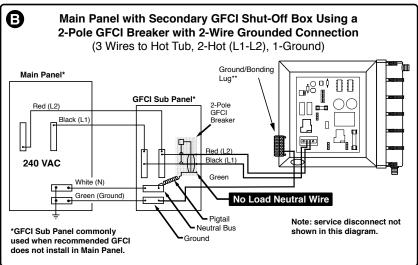




18.0 Circuit Board Wiring Diagrams

18.1 Domestic 60Hz Wiring Diagram

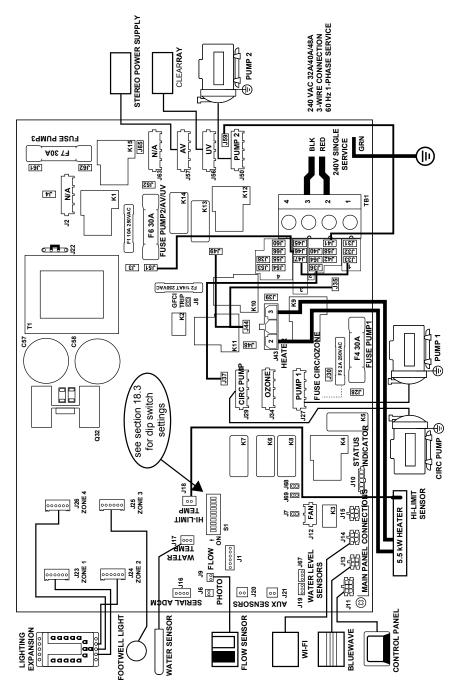

18.2 Export 50Hz Wiring Diagram

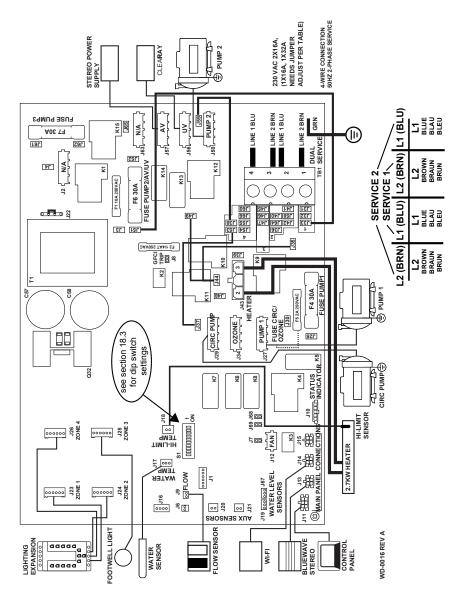




18.3 Dip Switch Settings


The dip switches are at the S1 location on the board.

A. Switch settings for Domestic 60Hz Models

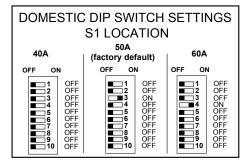

BREAKER	DIP SWITCH NUMBER									
	1	2	3	4	5	6	7	8	9	10
40A	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
50A*	OFF	OFF	ON	OFF						
60A	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
*50A is the factory default setting										

B. Switch settings for Export 50Hz Models

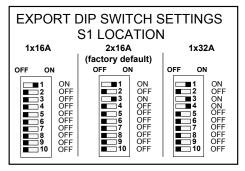


BREAKER	DIP SWITCH NUMBER									
	1	2	3	4	5	6	7	8	9	10
1x16A	ON	OFF								
2x16A*	ON	OFF	ON	OFF						
1x32A	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
*2x16A is the factory default setting										



18.4 Two Phase 50Hz Connection

The factory setting for export models is for dual service breakers. The jumper wiring is shown below. The extra White wire is **not used** for this setting.

PARTIAL VIEW OF THE CIRCUIT BOARD

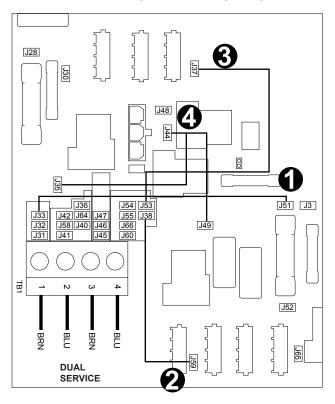


JUMPER WIRING						
Two Phase Connection Wiring						
Wire	From	То				
1	J33	J51				
2	J59	J38				
3	J37	J53				
4	J44	J49 & J35				



18.5 Single Phase 50Hz Connection

An optional setting for export models is for a single service breaker. The jumper wiring is shown below. Additionally, the included extra White wire (1*) **must be** installed.

PARTIAL VIEW OF THE CIRCUIT BOARD

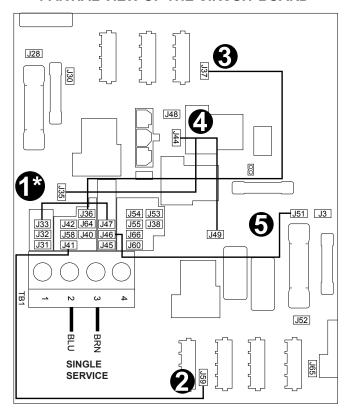

JUMPER WIRING						
Single Phase Connection Wiring						
Wire	From	То				
1*	J33	J47				
2	J59	J41				
3	J36	J37				
4	J44	J49 & J35				
5	J46	J51				
*Extra connection must be made						